

SERVICE
MANUAL

2110



marantz

model 2110

Am/Fm Stereophonic Tuner

MARANTZ DESIGN AND SERVICE

Using superior design and selected high grade components, MARANTZ company has created the ultimate in stereo sound.

Only **original MARANTZ parts** can insure that your MARANTZ product will continue to perform to the specifications for which it is famous.

Parts for your MARANTZ equipment are generally available to our National Marantz Subsidiary or Agent.

ORDERING PARTS:

Parts can be ordered either by mail or by telex. In both cases, correct part number has to be specified. If you order by mail, fulfil MARANTZ order forms.

The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which part is required
5. Way of shipment
6. Signature: any order form or telex must be signed otherwise such part order will be considered as null and void.

TECHNICAL ASSISTANCE

Should you require any other technical support, do not hesitate to contact the Technical Department of MARANTZ EUROPE & Co.

Avenue Louise 326 - Bte. 32

B-1050 Brussels

Belgium

Telephone: (02) 6407830 (10 l)

Telex: 26602

Fax.: (02) 649.29.20

PARTS ORDERING

Parts may be ordered at the following addresses:

AUSTRIA
HORNYPHON
Vertriebsgesellschaft GmbH
Wienerbergstrasse 1
A 1101 Wien
Austria
Telex: 132.332

AUSTRALIA
MARANTZ AUSTRALIA
PTY., Ltd.
19 Chard Road
Brookvale, NSW 2100
Australia
Telex: 24121

BELGIUM
SVD DIVISION MARANTZ
Industrialaan 1
1720 Groot-Bijgaarden
Belgium
Telex: 24466

CHILE
MARANTZ
DIVISION OF PHILIPS S.A.
AV. Santa Maria, 0760
Casilla 2687
Santiago
Telex: 240.239

DENMARK
MARANTZ
DIVISION OF PHILIPS
SERVICE A/S
Prags Boulevard 80
Postbox 1919
DK-2300 København S
Denmark
Telex: 31201

EIRE
MARANTZ IRELAND Ltd.
Newstead
Glionkeagh
Dublin 4
Telex: 25200

FINLAND
MARANTZ
DIVISION OF OY PHILIPS Ab
Kaivokatu 8
00100 Helsinki
Finland
Telex: 124811

FRANCE
MARANTZ FRANCE
4 Rue Bernard Palissy
92600 Asnières
France
Telex: 611651

GERMANY
MARANTZ GERMANY GmbH
Max-Planck-Strasse 22
6072 Dreieich 1
Germany
Telex: 529821

THE NETHERLANDS
MARANTZ
De Limiet 3
4131 NR Vianen
The Netherlands
Telex: 47679

NORWAY
MARANTZ
DIVISION OF PHILIPS A/S
Sandstuveien 40
Oslo 6
Norway
Telex: 72640

GREAT BRITAIN
MARANTZ AUDIO U.K. Ltd
Unit 15/16
Saxon Way Industrial Estate
Moor Lane
Harmondsworth UB7 0LW
Great Britain
Telex: 935196

GREECE
ADAMCO S.A.
P.O.Box 21025
Hippocratus Street 188
Athens 11410
Greece
Telex: 216.795

ITALY
MARANTZ ITALIANA S.p.A.
Via Monte Napoleone 10
20121 Milano
Italia

JAPAN
MARANTZ JAPAN, Inc.
35-1, 7-chome, Sagamiono
Sagamihara-shi, Kanagawa
Japan

KUWAIT
AL ALAMIAH ELECTRONICS
Ussama Building
Fahd al Saleem Street
P.O.Box 23781
Safat-Kuwait
Telex: 22694

SAUDI ARABIA
AL ALAMIAH ELECTRONICS
P.O.Box 5954
University Street
Riyadh 11432
Saudi Arabia
Telex: 201530

SOUTH AFRICA
MARANTZ
DIVISION OF PHILIPS S.A.
Rainer House
Ove Street, 10
Doornfontein
Johannesburg
Telex: 483.456

SPAIN
PHONO S.A.
Ignacio Iglesias 10
Badalona (Barcelona)
Spain
Telex: 59355

SWEDEN
MARANTZ
DIVISION OF PHILIPS
Försäljning AB
Tegeluddsvägen 1
S-115 84 Stockholm
Sweden
Telex: 14060

SWITZERLAND
DYNVOX ELECTRONICS
Route de Villars 105
1701 Fribourg
Switzerland
Telex: 942377

TURKEY
DOGRUOL Ltd.
I.M.C.
6 Blok N°6310
Unkapani
Istanbul
Turkey
Telex: 22085

MALTA
CACHIA & GALEA
Republic Street, 68D
Valetta
Telex: 1682

U.S.A.
MARANTZ COMPANY, Inc.
National Service Department
P.O.Box 577
Chatsworth, CA 91311
U.S.A.

All of the above locations are fully equipped to take care of your total service needs. Because various countries have differing configuration requirements, it is necessary that you contact the service facility in your particular country. In the event that there is no service location listed for your country, please, contact the nearest facility for the necessary assistance.


In case of difficulties, do not hesitate to contact the Technical Department at abovementioned address.

marantz®

TABLE OF CONTENTS

Section	Title	Page
1.	P.W. BOARDS	1
2.	TEST EQUIPMENT REQUIRED FOR SERVICING	2
3.	SCOPE DISPLAY ADJUSTMENT	2
3.1	AM Tuning Display Adjustment	2
4.	AM ALIGNMENT PROCEDURES	2
4.1	AM IF Alignment	2
4.2	AM Frequency Range and Tracking Alignment	2
5.	FM ALIGNMENT PROCEDURES	3
5.1	FM Frequency Range and Tracking Alignment	3
5.2	Stereo Separation Alignment	3
5.3	Muting Threshold Adjustment	3
5.4	FM 25 μ S Output Level Adjustment	4
6.	VOLTAGE CONVERSION FOR EUROPEAN MODEL	4
7.	DIAGRAMS	5
7.1	Block Diagram	5
7.2	Schematic Diagram	6
7.3	Tuner Board Schematic Diagram and Component Locations - P200	8
7.4	Power Supply Board Schematic Diagram and Component Locations - P800	11
7.5	Scope Amp Board Schematic Diagram and Component Locations - P900	12
7.6	Scope Display Switches Board Schematic Diagram and Component Locations - PR00	13
7.7	Function Switches Board Schematic Diagram and Component Locations - PS00	14
7.8	Mode Switches Board Schematic Diagram and Component Locations - PT00	14
7.9	Function Indicator Board Schematic Diagram and Component Locations - PY01	15
7.10	Dial Lamp Board Schematic Diagram and Component Locations - PZ01	15
8.	EXPLODED VIEWS AND PARTS LIST	16
8.1	[C01-99] Front Panel	16
8.2	[C02-99] Top Cover	17
8.3	[C03-99] Rear Panel	18
8.4	[P01-99] Front Chassis and General Parts	19
8.5	[P02-99] Scope Dial Assembly and P.W. Boards	20
8.6	[P03-99] Main Chassis and P.W. Boards	21
8.7	[H01-99] Packing Materials	23
8.8	Electrical Parts List	24
9.	TECHNICAL SPECIFICATIONS	29

MODEL 2110 AM/FM STEREOPHONIC TUNER

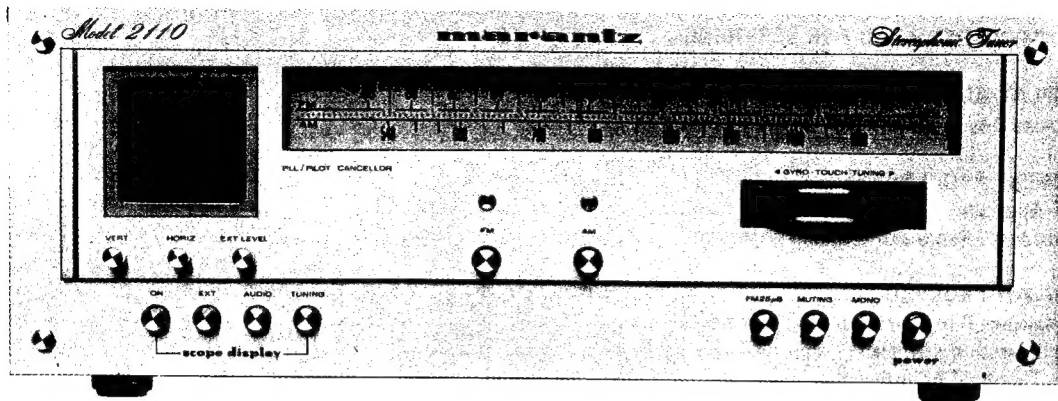

INTRODUCTION

This service manual was prepared for use by Authorized Warranty Stations and contains service information for Marantz Model 2110 AM/FM Stereophonic Tuner.

Servicing information and voltage data included in this manual are intended for use by the knowledgeable and experienced technician only. All instructions should be read carefully. No attempt should be made to proceed without a good understanding of the operations in the tuner.

The parts list furnishes information by which replacement parts may be ordered from the Marantz Company. A simple description is included for parts which can usually be obtained through local suppliers.

1. P.W. BOARDS

As can be seen from the circuit diagram, the chassis of Model 2110 consists of the following units. Each unit mounted on a printed circuit board is described within the square enclosed by a bold dotted line on the circuit diagram.

1. Tuner mounted on P.W. Board P200
2. Power Supply mounted on P.W. Board P800
3. Dial Lamp mounted on P.W. Board PZ01
4. Function Indicator mounted on P.W. Board PY00
5. Scope Amp mounted on P.W. Board P900
6. Scope Display Switches mounted on P.W. Board PRO0
7. Function Switches mounted on P.W. Board PS00
8. Mode Switches mounted on P.W. Board PT00

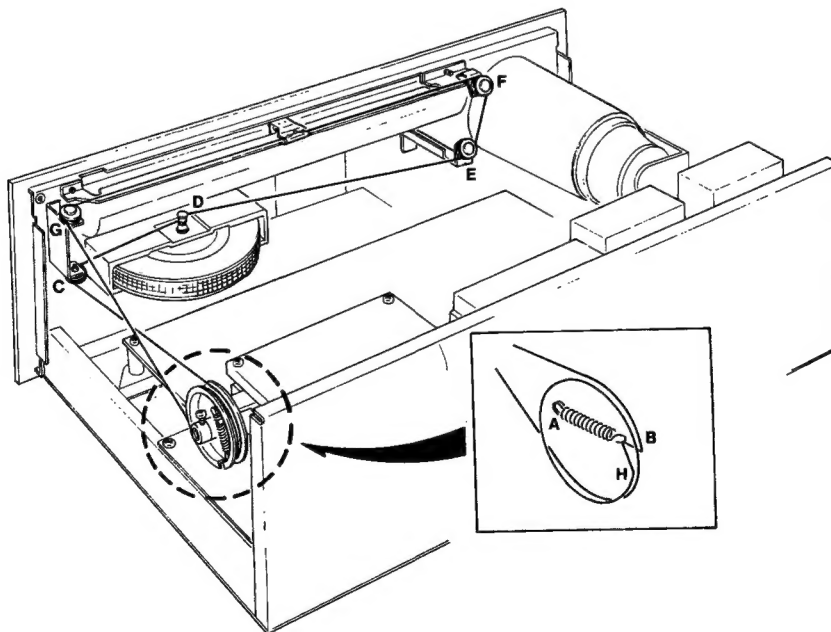


Figure 1. Dial Stringing

2. TEST EQUIPMENT REQUIRED FOR SERVICING

This table lists the test equipment required for servicing the Model 2110 Tuner.

Item	Manufacturer and Model No.	Use
AM Signal Generator		Signal source for AM alignment
Test Loop		Use with AM Signal Generator
FM Signal Generator MPX Signal Generator	Sound Technology Model 1000A	Signal source for FM alignment Stereo separation alignment and trouble shooting
Distortion Analyzer Audio Oscillator AC VTVM	Sound Technology Model 1700A	Distortion measurements Sinewave and squarewave signal source Voltage measurements (AC)
Oscilloscope	Tektronix Model T932 Philips Model 3232	Waveform analysis and trouble shooting
Frequency Counter	Fluke Model 1900A	MPX Oscillator adjustment (VCO)
Circuit Tester		Trouble shooting
DC VTVM	Fluke Model 8000 "Digital" Simpson Model 313, Triplet Model 801	Voltage measurements (DC)
AC Wattmeter	Simpson Model 1379	Monitors primary power to tuner
Line Voltmeter	Simpson Model 1359	Monitors potential of primary power to tuner
Variable Autotransformer	Superior Electronic Co., Powerstat Model 116B-10A	Adjusts level of primary power to tuner

3. SCOPE DISPLAY ADJUSTMENT

1. Set the EXT LEVEL control to its fully counterclockwise position.
2. Depress the SCOPE DISPLAY ON and AUDIO pushswitches in.
3. Adjust the HORIZ and VERT controls to center the dot in the small circle in the center of the scope display.
4. Adjust the BRIGHT control (R001) on the rear panel until the brightness becomes dark a little.
5. Adjust the FOCUS control (R002) so that the spot may become smaller and circular.
6. Turn the EXT LEVEL control to its fully clockwise position.
7. Connect a 150 mV, 1 kHz signal to the SCOPE INPUTS R jack and adjust R928 (H. GAIN) until the horizontal deflection is around 3 cm.
8. In turn, connect the same signal to the L jack and similarly, adjust R927 (V. GAIN) until the vertical deflection is around 3 cm.
9. Set the HORIZ and VERT controls to the 12-o'clock position and adjust R925 (H. CENTER) until the spot comes in the horizontal deflection center.
10. Similarly, adjust R926 (V. CENTER) until the spot comes in the vertical deflection center.

3.1 AM TUNING DISPLAY ADJUSTMENT

1. Depress the SCOPE DISPLAY ON and TUNING pushswitches.
2. Depress the AM pushswitch.
3. Adjust R931 until the spot comes in the center below the base line without tuning into a station.

4. AM ALIGNMENT PROCEDURES

4.1 AM IF ALIGNMENT

1. Connect a sweep generator to the TC3 and an alignment scope to the R155.
2. Rotate each core of IF transformers L152 and L151 for the maximum height and flat top symmetrical response.

4.2 AM FREQUENCY RANGE AND TRACKING ALIGNMENT

1. Set AM signal generator to 515 kHz. Turn the tuning capacitor fully closed (place the tuning pointer at the low end) and adjust the oscillator coil L153 for maximum audio output.
2. Set the signal generator to 1650 kHz. Place the tuning pointer in the high frequency end and adjust the oscillator trimmer on the oscillator tuning capacitor for maximum audio output.
3. Repeat steps 1 and 2 until no further adjustment is necessary.
4. Set the generator to 600 kHz, tune the tuner to the same frequency and adjust a slug core of AM ferrite-rod antenna L001 for maximum output.
5. Set the generator to 1400 kHz and tune the tuner to the same frequency and adjust the trimming capacitor on the antenna tuning capacitor for maximum output.
6. Repeat procedures 4 and 5 until no further adjustment is necessary.

NOTE: During tracking alignment reduce the signal generator output as necessary to avoid AGC action.

5. FM ALIGNMENT PROCEDURES

5.1 FM FREQUENCY RANGE AND TRACKING ALIGNMENT

1. Connect an FM signal generator to the FM antenna terminals and an oscilloscope and an audio distortion analyzer to the OUTPUT jacks on the rear panel.
2. Set the generator to 87.4 MHz and provide about 3 to 5 μV . Place the tuning pointer at the low frequency end by rotating the tuning knob and adjust the pitch of oscillator coil L105 to obtain maximum audio output.
3. Set the generator to 109 MHz and provide about 3 to 5 μV . Rotate the tuning knob and place the tuning pointer at the high frequency end and adjust the trimming capacitor C121 for maximum output.
4. Repeat steps 2 and 3 until no further adjustment is necessary.
5. Set the generator to 90 MHz and tune the tuner to the same frequency. Decrease signal generator output until the audio output level decreases with the decreasing generator output. Adjust the pitch of antenna coil L101 and RF coil L102 for maximum output.
6. Set the generator to 106 MHz and tune the tuner to the same frequency. Decrease the signal generator output until the audio output level decreases with the decreasing generator output. Adjust the trimming capacitors of antenna and RF tuning circuits for maximum output.
7. Repeat steps 5 and 6 until no further adjustment is necessary.

8. Connect the center tuning meter to the test points J136 and J137. Adjust the L201 so that the tuning meter pointer indicates its center. Depress the SCOPE DISPLAY TUNING pushswitch. Adjust the R227 until the tuning bar is located the center of the oscilloscope. Set the FM signal generator to 60 dB at 98 MHz and tune the tuner to the same frequency in the vertical trace of the oscilloscope. Adjust the L202 for minimum distortion.

5.2 STEREO SEPARATION ALIGNMENT

1. Set the FM signal generator to provide 1 μV at 98 MHz. Tune the tuner to the same frequency so that the tuning bar is located the center of the oscilloscope. Then turn off the modulation of the generator, connect a frequency counter to test point J138 and adjust R304 so that the frequency counter may precisely read 76 kHz.
2. Modulate the generator with stereo composite signal consisting of only L or R channel (of course a pilot signal must be included).
3. Adjust the trimming resistor R336 for maximum and same separation in both channels.

5.3 MUTING THRESHOLD ADJUSTMENT

1. Set the FM signal generator output to provide 12.5 μV (IHF) at 98 MHz and tune tuner to the same frequency. Adjust the trimming resistor R212 for the threshold level of 12.5 μV . (During this adjustment turn the FM MUTING pushswitch "on").

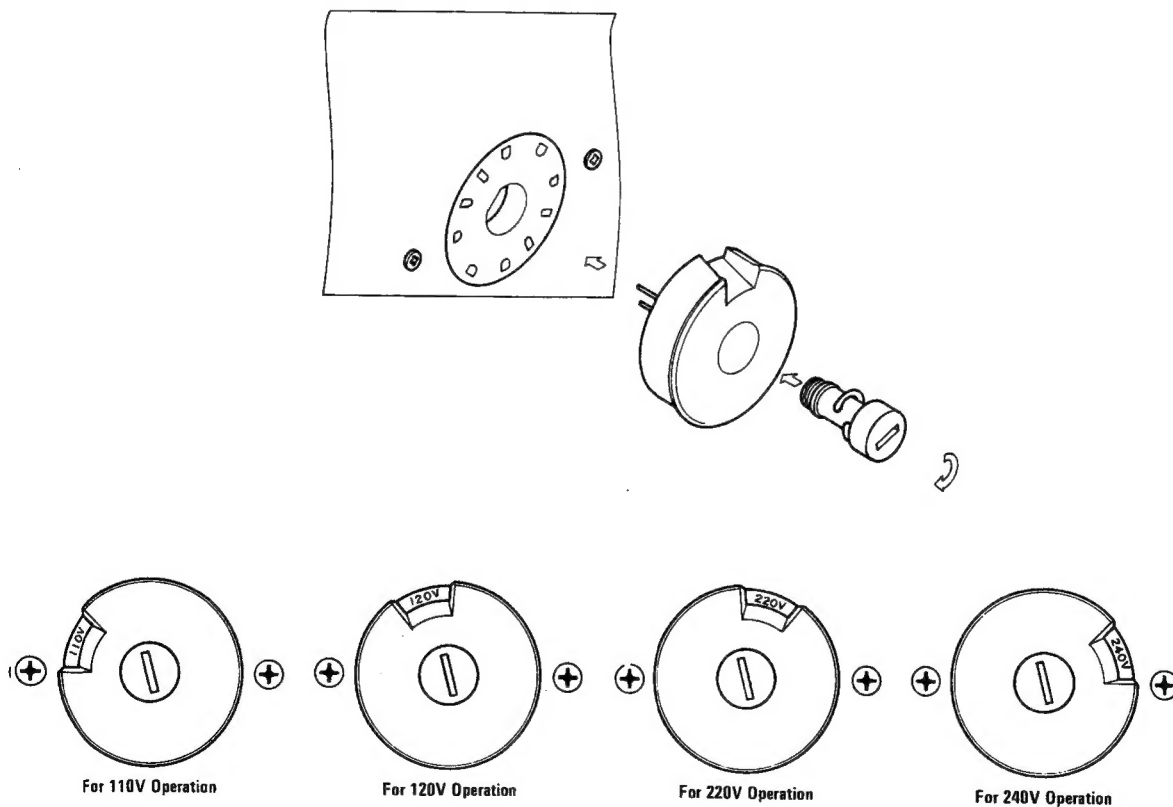


Figure 2. Voltage Conversion Chart

5.4 FM 25 μ S OUTPUT LEVEL ADJUSTMENT

1. Set the FM signal generator to provide a 400 Hz, 50% modulated 98 MHz mono signal, at 1 k μ V output. Precisely tune the tuner to 98 MHz.
2. Depress the FM 25 μ S pushswitch, and adjust R216 until the outputs of both channels are 580 mV.

6. VOLTAGE CONVERSION FOR EUROPEAN MODEL

The European version of the Model 2110 is equipped with a universal power transformer that may be adjusted to operate at 110 V, 120 V, 220 V, or 240 V AC at 50 to 60 Hz. To convert the unit to a different power source voltage, reposition conversion plug as shown in Figure 2.

CAUTION: DISCONNECT POWER SUPPLY CORD FROM AC OUTLET BEFORE CONVERTING VOLTAGE.

FTZ REGULATION

Instruction for the use in the range other than specified in FTZ codes.


Achtung für die Leute, die in dem Gebiet wohnen, wo die FTZ-Bestimmungen vorherrschend sind.

Sollte das Gerät auch für Frequenzen ausserhalb des in den FTZ-Bestimmungen angegebenen Bereiches empfangebereit sein, bitten wir, den Bereich durch Nachstellen des Kernes in der Oszillatorschule (in der Abbildung mit "FTZ" gekennzeichnet) so zu korrigieren, dass er den Bestimmungen entspricht.


7.1 BLOCK DIAGRAM




7.2 SCHEMATIC DIAGRAM

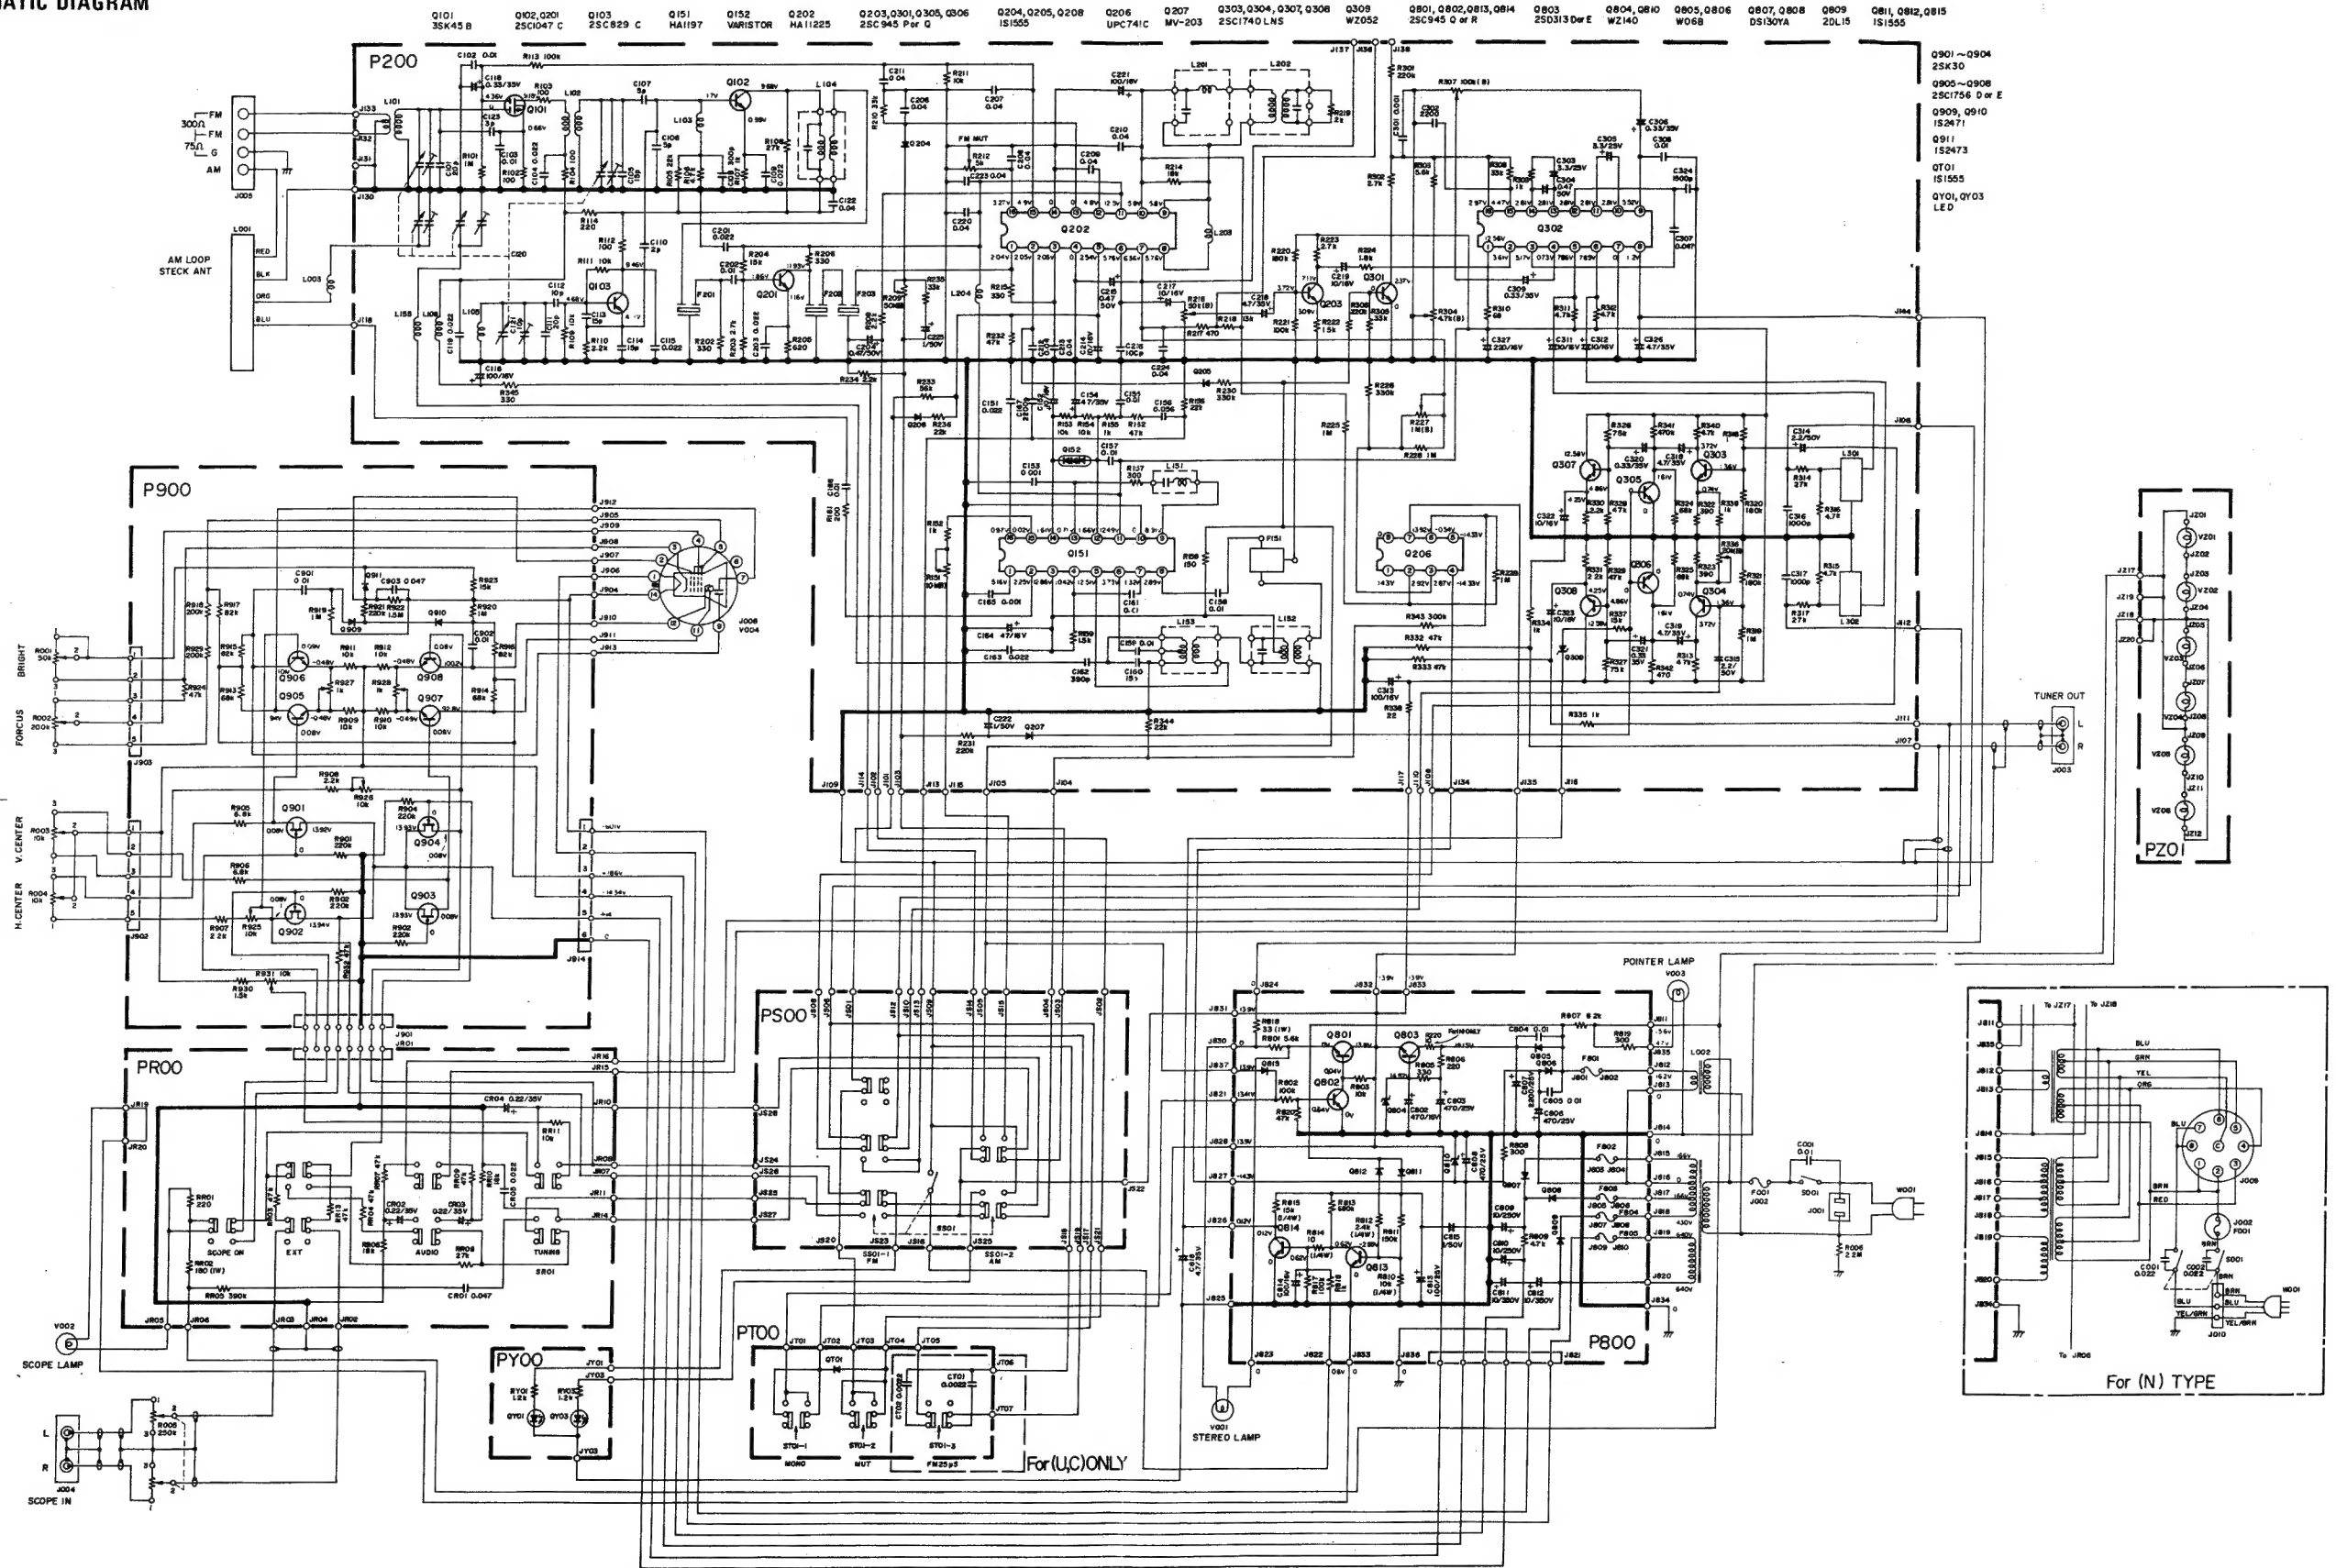


7.3 TUNER BOARD SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - P200

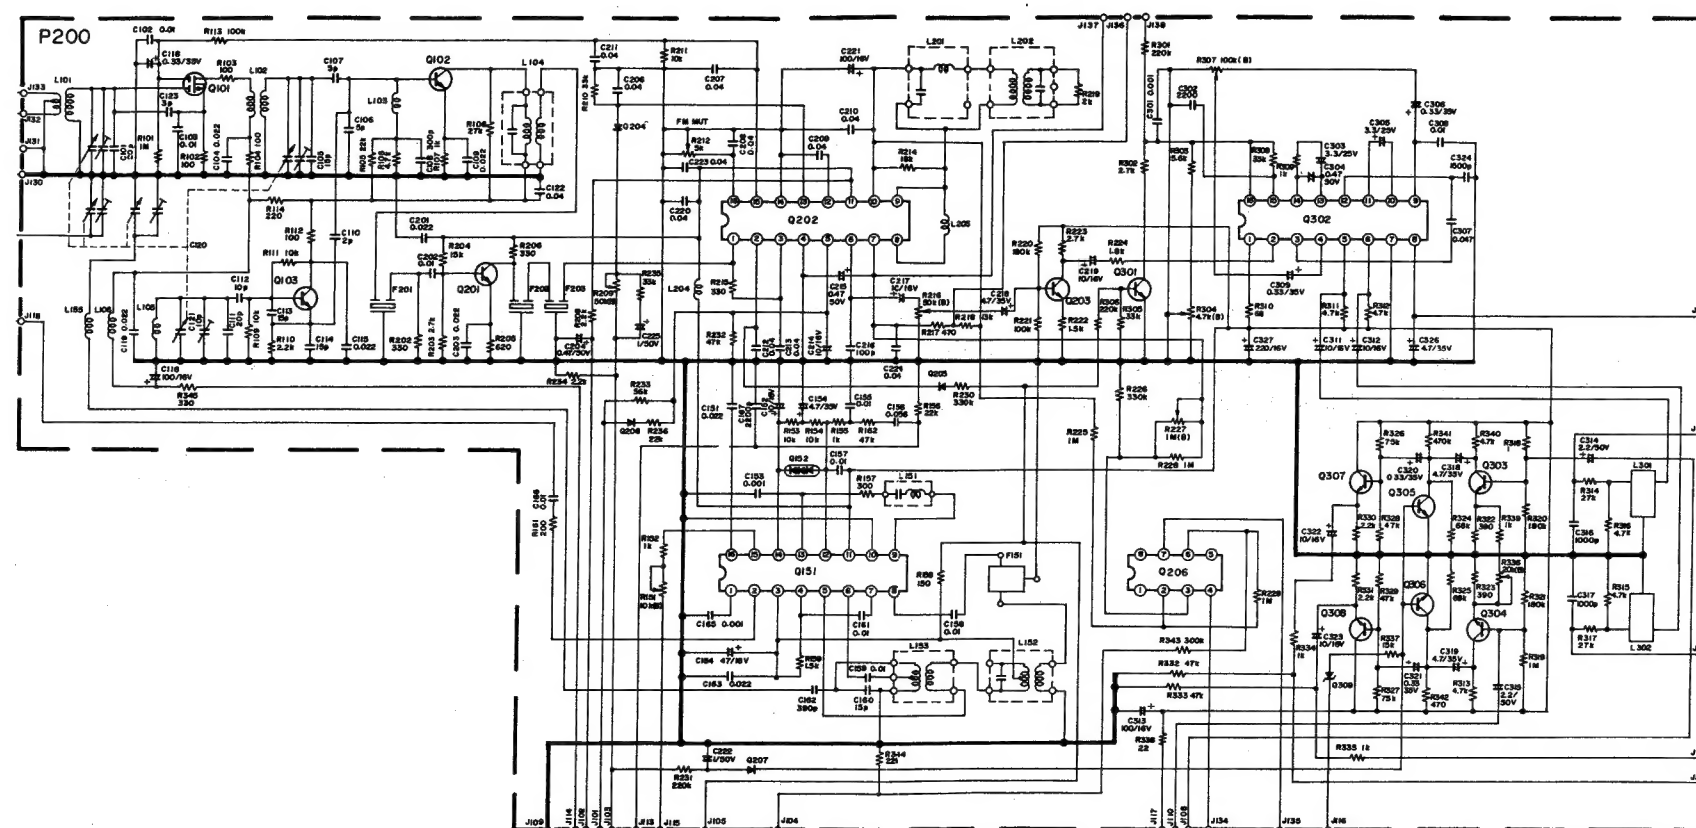


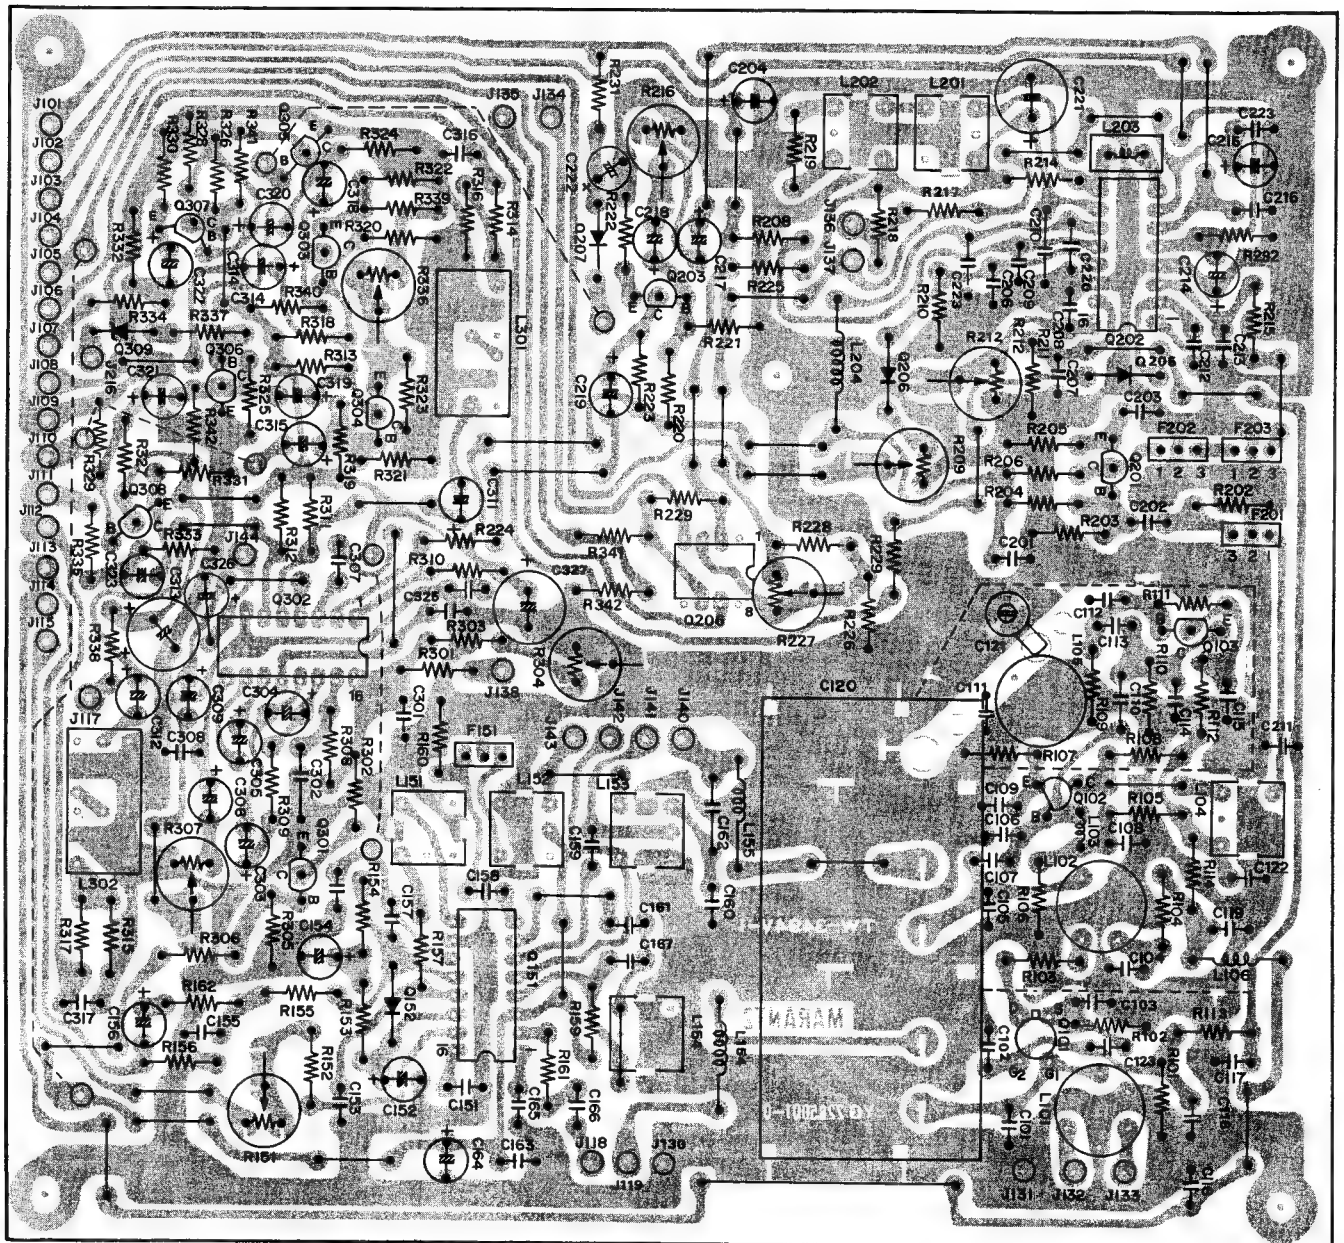


7.4 POWER SUPPLY SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - P800

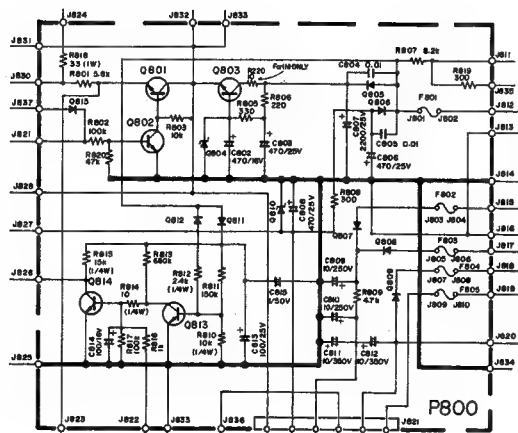



[U.S.A. & CANADIAN MODELS ONLY]

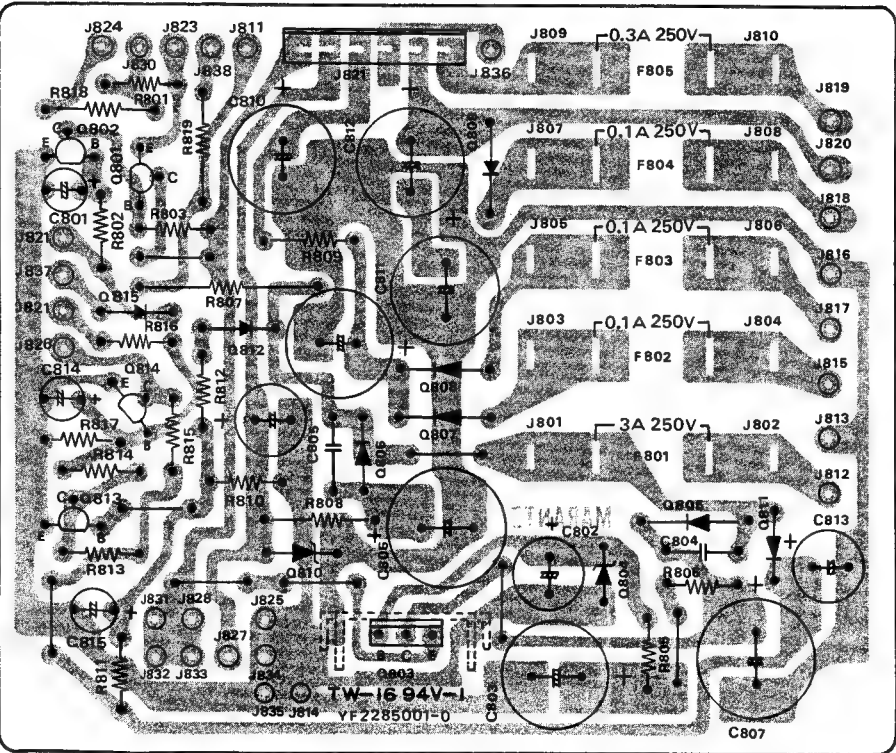


[EUROPEAN MODEL ONLY]

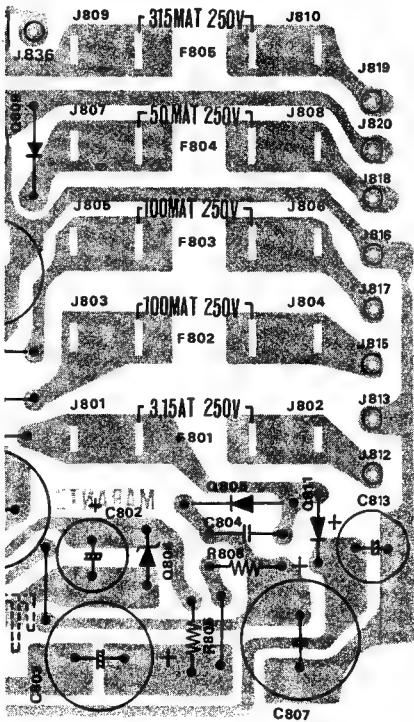


7.5 SCOPE AMP SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - P900

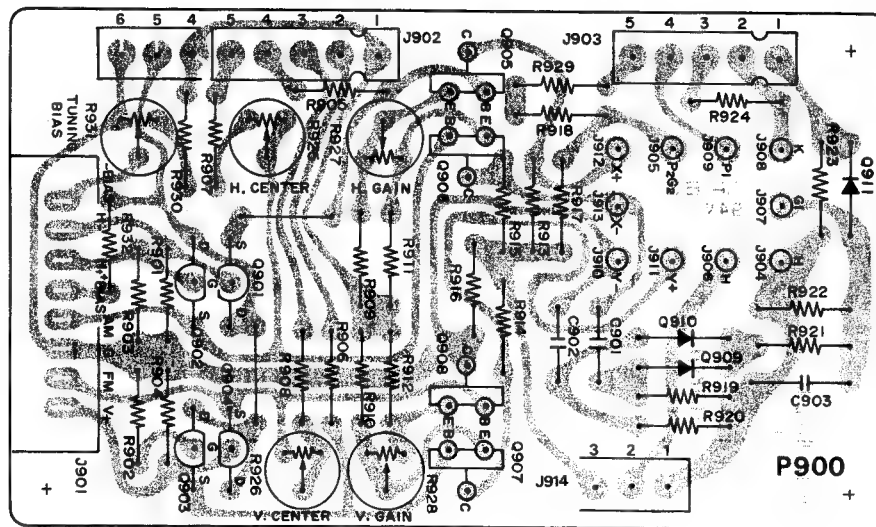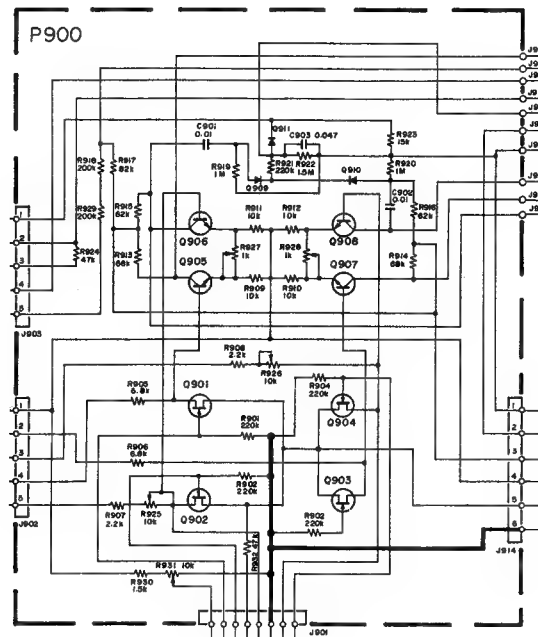

7.8 SCOPE DISPLAY SWITCHES SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - PROO

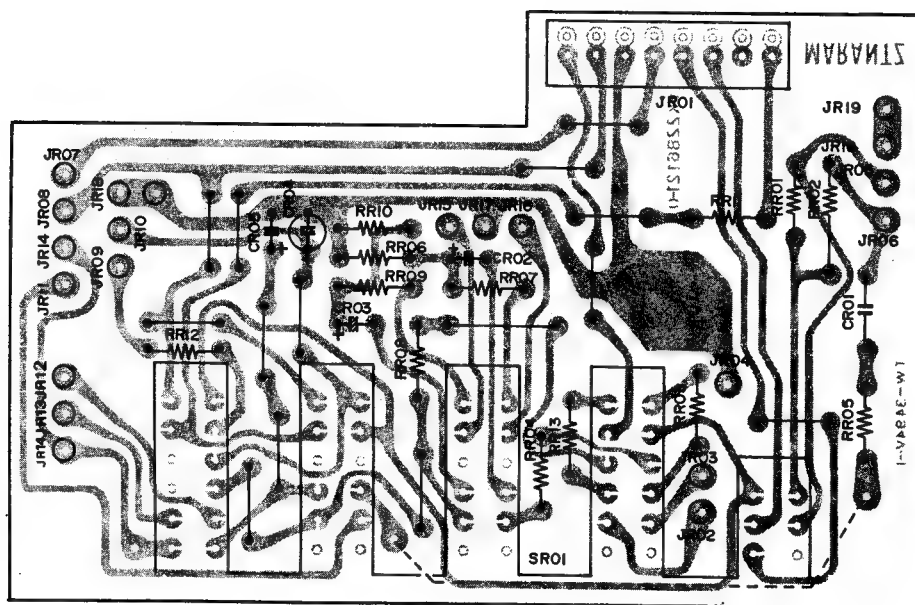



7.7 FUNCTION SWITCHES SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - PS00

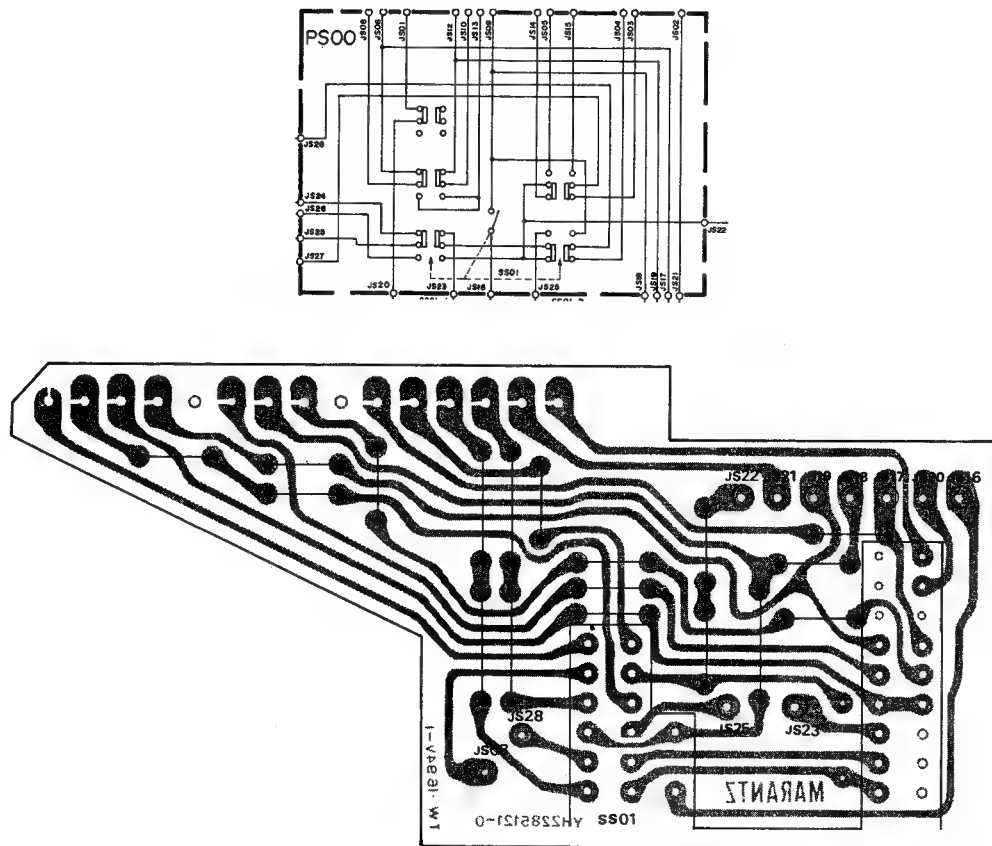



7.8 MODE SWITCHES SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - PT00



7.9 FUNCTION INDICATOR SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - PY01

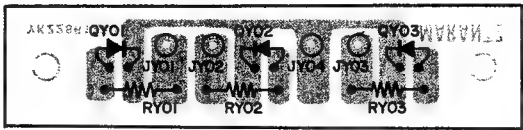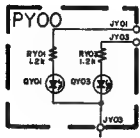


7.10 DIAL LAMP SCHEMATIC DIAGRAM AND COMPONENT LOCATIONS - PZ01

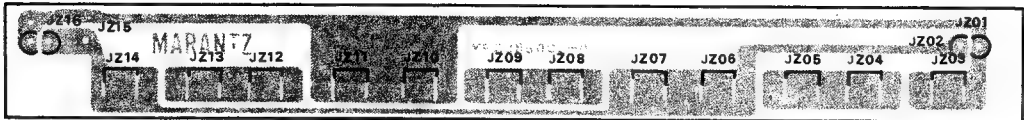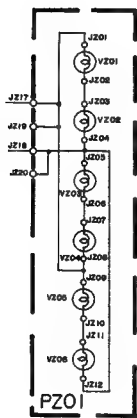

8. EXPLODED VIEWS AND PARTS LIST

8.1 [C01-99] FRONT PANEL

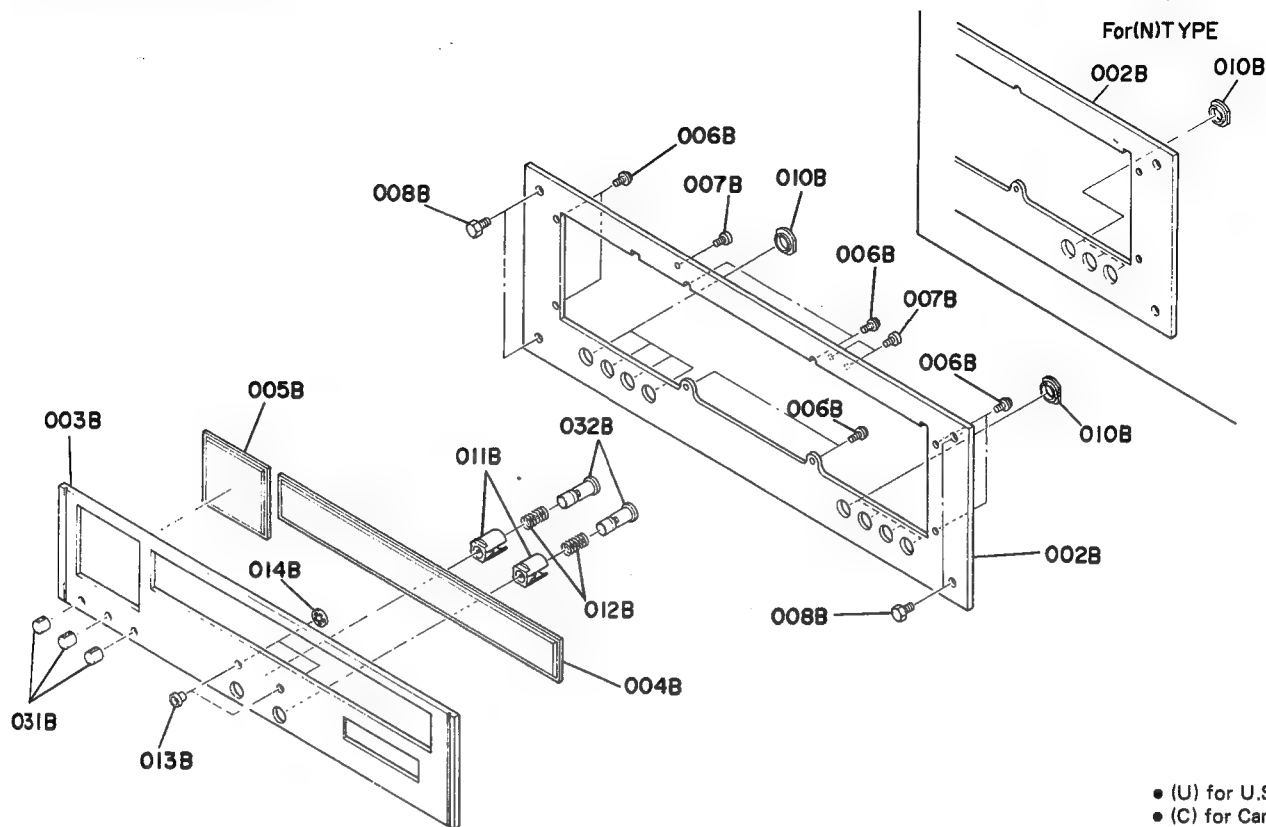


- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
A	1	1		2285063400	Front Panel Assembly
A1			1	2285063410	Front Panel Assembly
002B	1	1		2285063010	Escutcheon, Main
002B			1	2285063030	Escutcheon, Main
003B	1	1	1	2285063022	Escutcheon, Sub
004B	1	1	1	2286158020	Window, Dial
005B	1	1	1	2286158010	Window, Scope
006B	8	8	8	51480306A9	F. Washer Screw F3 x 6
007B	3	3	3	51570305B9	P. TAPT. Screw P3 x 5
010B	8	8	7	2978259012	Bushing
011B	2	2	2	2279259013	Bushing
012B	2	2	2	2979115012	Spring
013B	2	2	2	2979259022	Bushing
014B	2	2	2	64020600Q0	RG Ring, CS Type

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
008B	4	4	4	52017069J2	H. Head Bolt
031B	3	3	3	2286154012	Knob, Scope VR.
032B	2	2	2	2979154022	Knob, AM/FM

8.2 [C02-99] TOP COVER

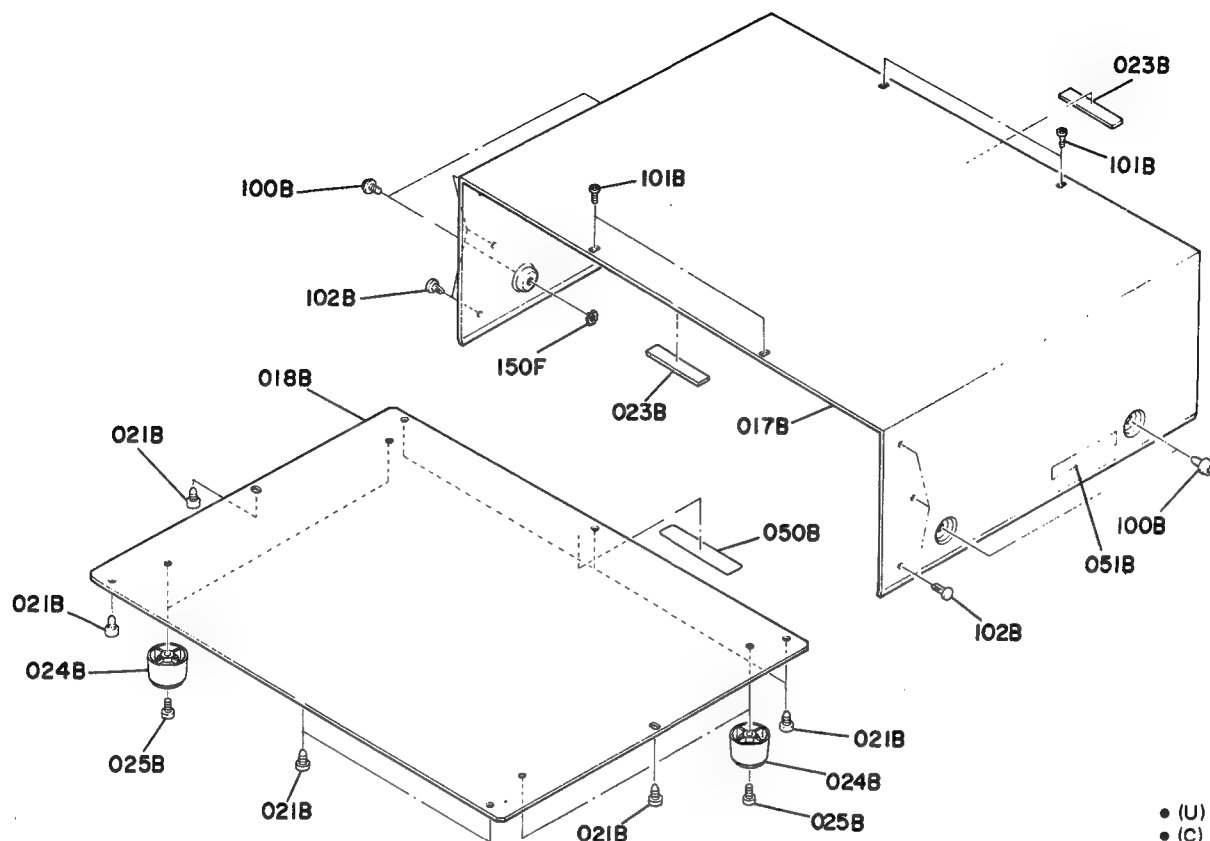


- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
017B	1	1	1	2216257112	Lid, Top Cover
018B	1	1	1	2216257022	Lid, Bottom Cover
021B	8	8	8	51280408U0	B.H. Tapped Screw B4 x 8
023B	2	2	2	2965118010	Spacer
024B	4	4	4	2932057010	Leg
025B	4	4	4	51570410S0	P. TAPT Screw P4 x 10

REF. DESID.	QTY			PART NO.	DESCRIPTION
	U	C	N		
050B	1		1	2578861010	Label
050B		1		2911861112	Label
051B	1		1	2932861012	Label
051B		1		2911861143	Label
100B	4	4	4	51480406S9	F. Washer Screw F4 x 6
101B	4	4	4	51280306U0	B.H. Tapped Screw B3 x 6
102B	6	6	6	2991259010	Bushing
150F			1	54050400R0	T.L. Washer OR

8.3 [C03-99] REAR PANEL

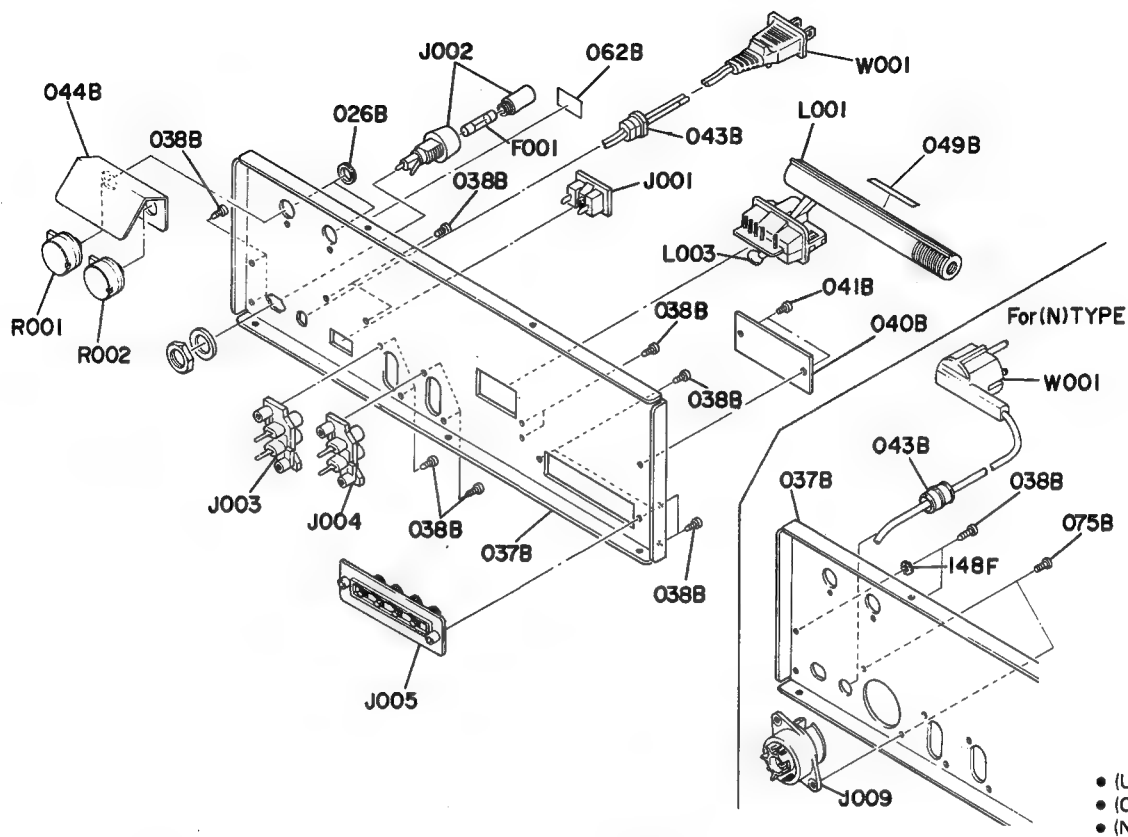


- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
026B	2	2	2	53228059E0	S.C. Nut
037B	1	1		2285160210	Bracket, Rear Panel
037B			1	2285160223	Bracket, Rear Panel
038B	14	14	14	51280308U0	B.H. Tapped Screw B3 x 8
040B	1			2285265010	Indicator
040B		1		2285265020	Indicator
040B			1	2285265050	Indicator
041B	2	2	2	51760306B0	OS Tapped Screw 3 x 6
043B	1	1		1455259030	Bushing
043B			1	2286259110	Bushing
044B	1	1	1	2286120020	Insulator
049B	1		1	2506265060	Label
049B		1		2911861172	Label
062B			1	2911861280	Label
075B			2	51100308S9	B.H.M. Screw B3 x 8
148F			1	54050300R0	T.L. Washer, OR

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
J001	1	1		YJ04000560	Jack, AC Outlet
J002	1	1		YJ08000230	Jack, Fuse Holder
J002			1	YJ08000220	Jack, Fuse Holder
J003	1	1	1	YT02020140	Terminal, Output
J004	1	1	1	YT02020140	Terminal, Scope In
J005	1	1	1	YT01040182	Terminal, Ant.
J009			1	BY03110010	Plug, Voltage Selector
F001	1	1		FS10150050	Fuse 1.5A 250V
F001			1	FS10063800	Fuse 630mA 250V
L001	1	1	1	LF11200620	Ant Coil, AM Bar Ant
L003	1	1	1	LC13320020	Choke Coil 3.3μH
R001	1	1	1	RA05030180	Trimming Resistor 50KΩ (B)
R002	1	1	1	RK02040060	Variable Resistor 200KΩ (B)
W001	1	1		YC02000140	A.C. Power Cord
W001			1	YC01900030	A.C. Power Cord

8.4 [P01-99] FRONT CHASSIS AND GENERAL PARTS

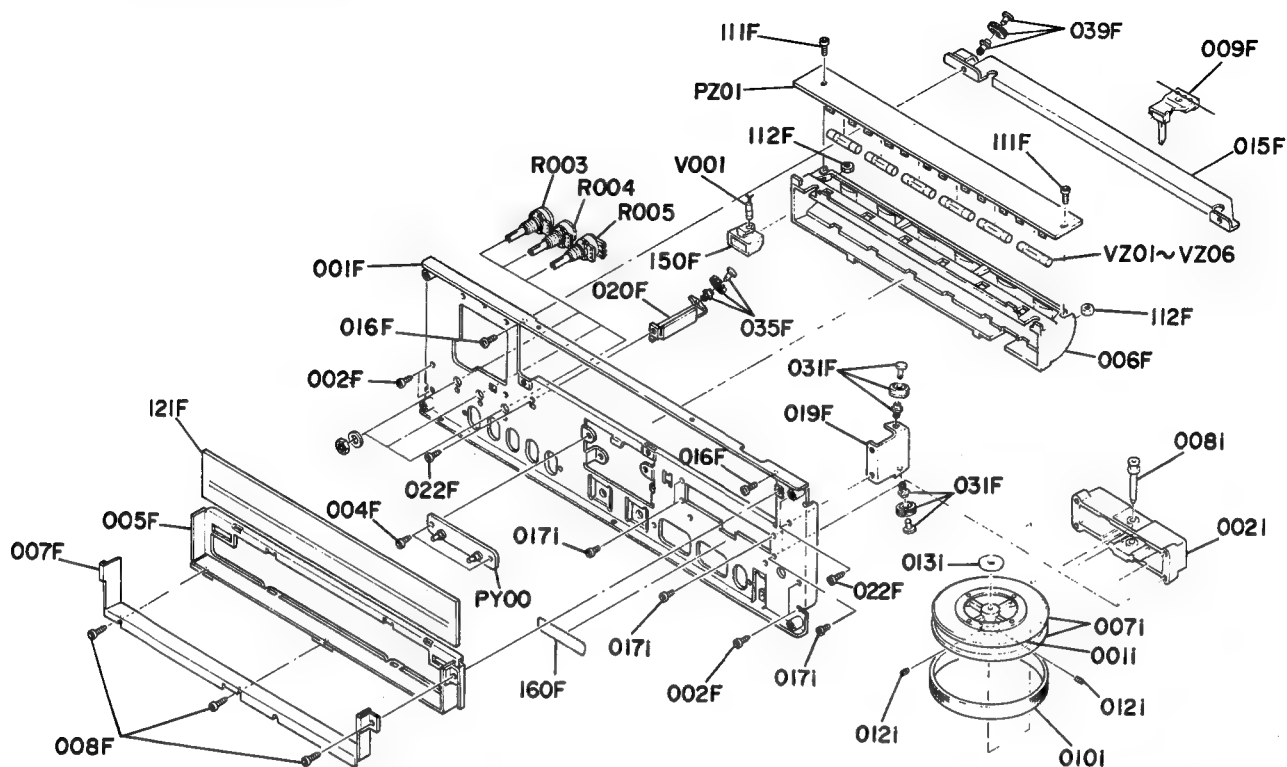


• (U) for U.S.A.
 • (C) for Canada
 • (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
D	1	1	1	2219273420	Flywheel Assembly
001I	1	1	1	2219273012	Flywheel
007I	2	2	2	2219063030	Escutcheon
010I	1	1	1	2215353010	Ring
012I	2	2	2	51690306Q9	Socket Screw, HP 3 x 6
002I	1	1	1	2219104502	Retainer, K
008I	1	1	1	2219112012	Shaft
013I	1	1	1	59031405G9	Washer
017I	4	4	4	51280308B0	B.H. Tapped Screw B3 x 8
001F	1	1	1	2285160012	Bracket
002F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
004F	2	2	2	51280306B0	B.H. Tapped Screw B3 x 6
005F	1	1	1	2218271013	Holder
006F	1	1	1	2218274013	Reflector
007F	1	1	1	2219053022	Cover
008F	3	3	3	51280306B0	B.H. Tapped Screw B3 x 6
009F	1	1	1	2991103500	Pointer, K
015F	1	1	1	2286051010	Guide
016F	2	2	2	51100306A9	B.H.M. Screw B3 x 6
019F	1	1	1	2285271010	Holder
020F	1	1	1	2286271020	Holder
022F	3	3	3	51100306A9	B.H.M. Screw B3 x 6
031F	2	2	2	2286262500	Pulley, K
035F	1	1	1	2286262500	Pulley, K

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
039F	1	1	1	2286262500	Pulley, K
111F	2	2	2	51100308A9	B.H.M. Screw B3 x 8
112F	2	2	2	53110303E9	Hexagon Nut
121F	1	1	1	2285302012	Dial
150F	1	1	1	2218274033	Reflector
160F	1	1	1	2991861010	Label
R003	1	1	1	R801030240	Variable Resistor 10KΩ (B)
R004	1	1	1	R801030240	Variable Resistor 10KΩ (B)
R005	1	1	1	RM02540440	Variable Resistor 250KΩ
V001	1	1	1	IN10080340	Lamp, Stereo 60mA 8V
PY00	1	1	1	YK22861220	P.W. Board, L.E.D.
	1	1	1	ZZ22861220	P.W. Board Assembly
PZ01	1	1	1	YF22860020	P.W. Board, Dial Illuminator
	1	1	1	ZZ22860020	P.W. Board Assembly
VZ01	6	6	6	IN10080070	Dial Lamp 0.2A 8V
VZ06					

8.5 [P02-99] SCOPE DIAL ASSEMBLY AND P.W. BOARDS

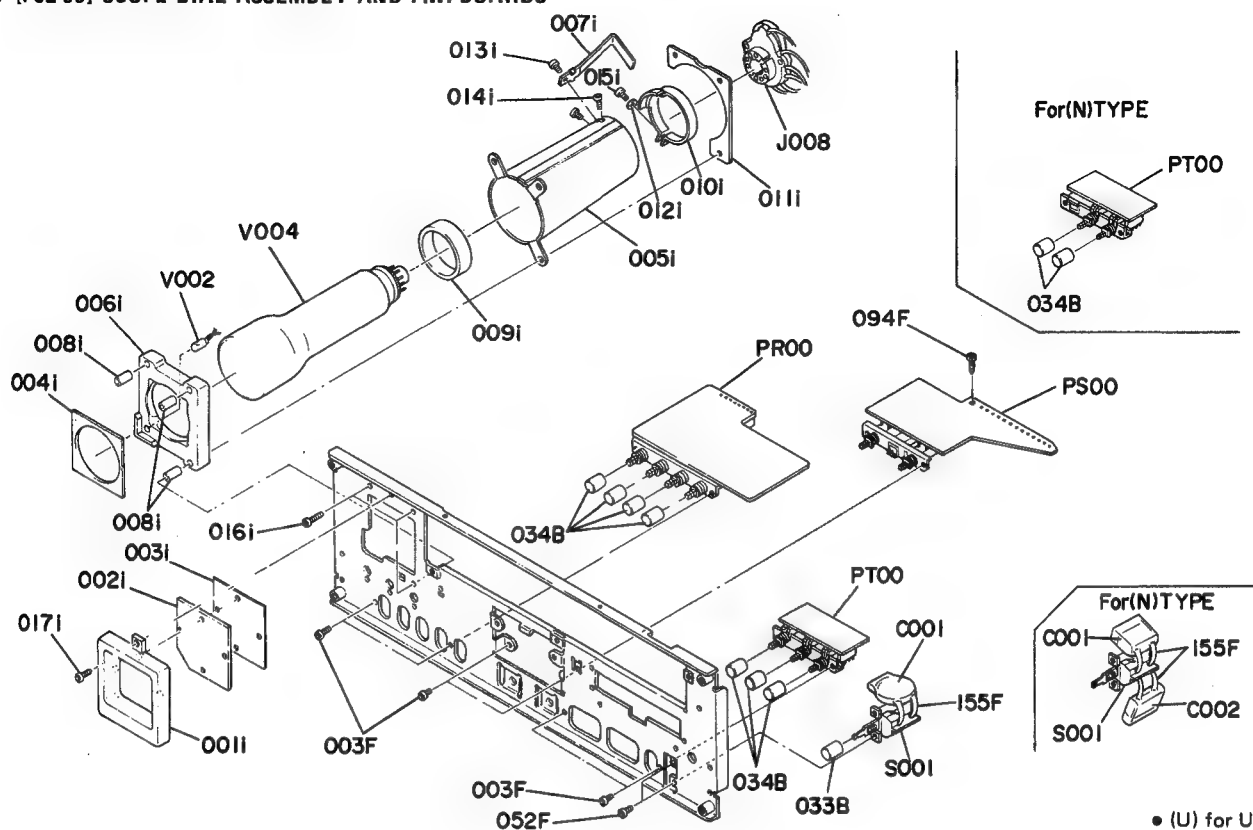


- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
033B	1	1	1	2963154022	Knob
034B	7	7	6	2970154032	Knob
003F	6	6	6	51100306A9	B.H.M. Screw B3 x 6
052F	2	2	2	51100306A9	B.H.M. Screw B3 x 6
094F	1	1	1	51280306B0	B.H. Tapped Screw B3 x 6
155F	1	1	1	2285120010	Insulator
155F	1	1	2	3926120010	Insulator
C001	1	1	1	DK18103520	Ceramic Cap. 0.01μF 125V
C001	1	1	1	DF17223800	Film Cap. 0.022μF 1000V
C002	1	1	1	DF17223800	Film Cap. 0.022μF 1000V
S001	1	1	1	SP01010210	Push Switch, Power
S001	1	1	1	SP02010300	Push Switch, Power
PR00	1	1	1	YK22861210	P.W. Board, Scope Switch
PR00	1	1	1	ZZ22852210	P.W. Board Assembly
PS00	1	1	1	YH22851210	P.W. Board Function Switch
PS00	1	1	1	ZZ22851210	P.W. Board Assembly
PT00	1	1	1	YH22851220	P.W. Board, Mode Switch
PT00	1	1	1	ZZ22851220	P.W. Board Assembly

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
D	1	1	1	2286302400	Scope Dial Assembly
002i	1	1	1	2286302030	Dial
003i	1	1	1	2286303010	Mask
004i	1	1	1	2286053030	Cover
001i	1	1	1	2286401010	Frame
005i	1	1	1	2219109012	Shield
006i	1	1	1	2219357012	Rod., Scope Pade
007i	1	1	1	2286005012	Clamper
008i	3	3	3	2219055020	Collar
009i	1	1	1	2904056022	Buffer
010i	1	1	1	2904005030	Clamper
011i	1	1	1	2207005010	Clamper
012i	1	1	1	54020301S0	Flat Washer, P.
013i	1	1	1	51100308S9	B.H.M. Screw B3 x 8
014i	2	2	2	51100304S9	B.H.M. Screw B3 x 4
015i	1	1	1	51100305S9	B.H.M. Screw B3 x 5
016i	3	3	3	51100316S9	B.H.M. Screw B3 x 16
017i	1	1	1	51280306B0	B.H. Tapped Screw B3 x 6
J008	1	1	1	YJ05000182	Jack, CRT Socket
V002	1	1	1	IN10080340	Lamp, 60mA 8V
V004	1	1	1	VB00235012	Picture Tube

8.6 [P03-99] MAIN CHASSIS AND P.W. BOARDS

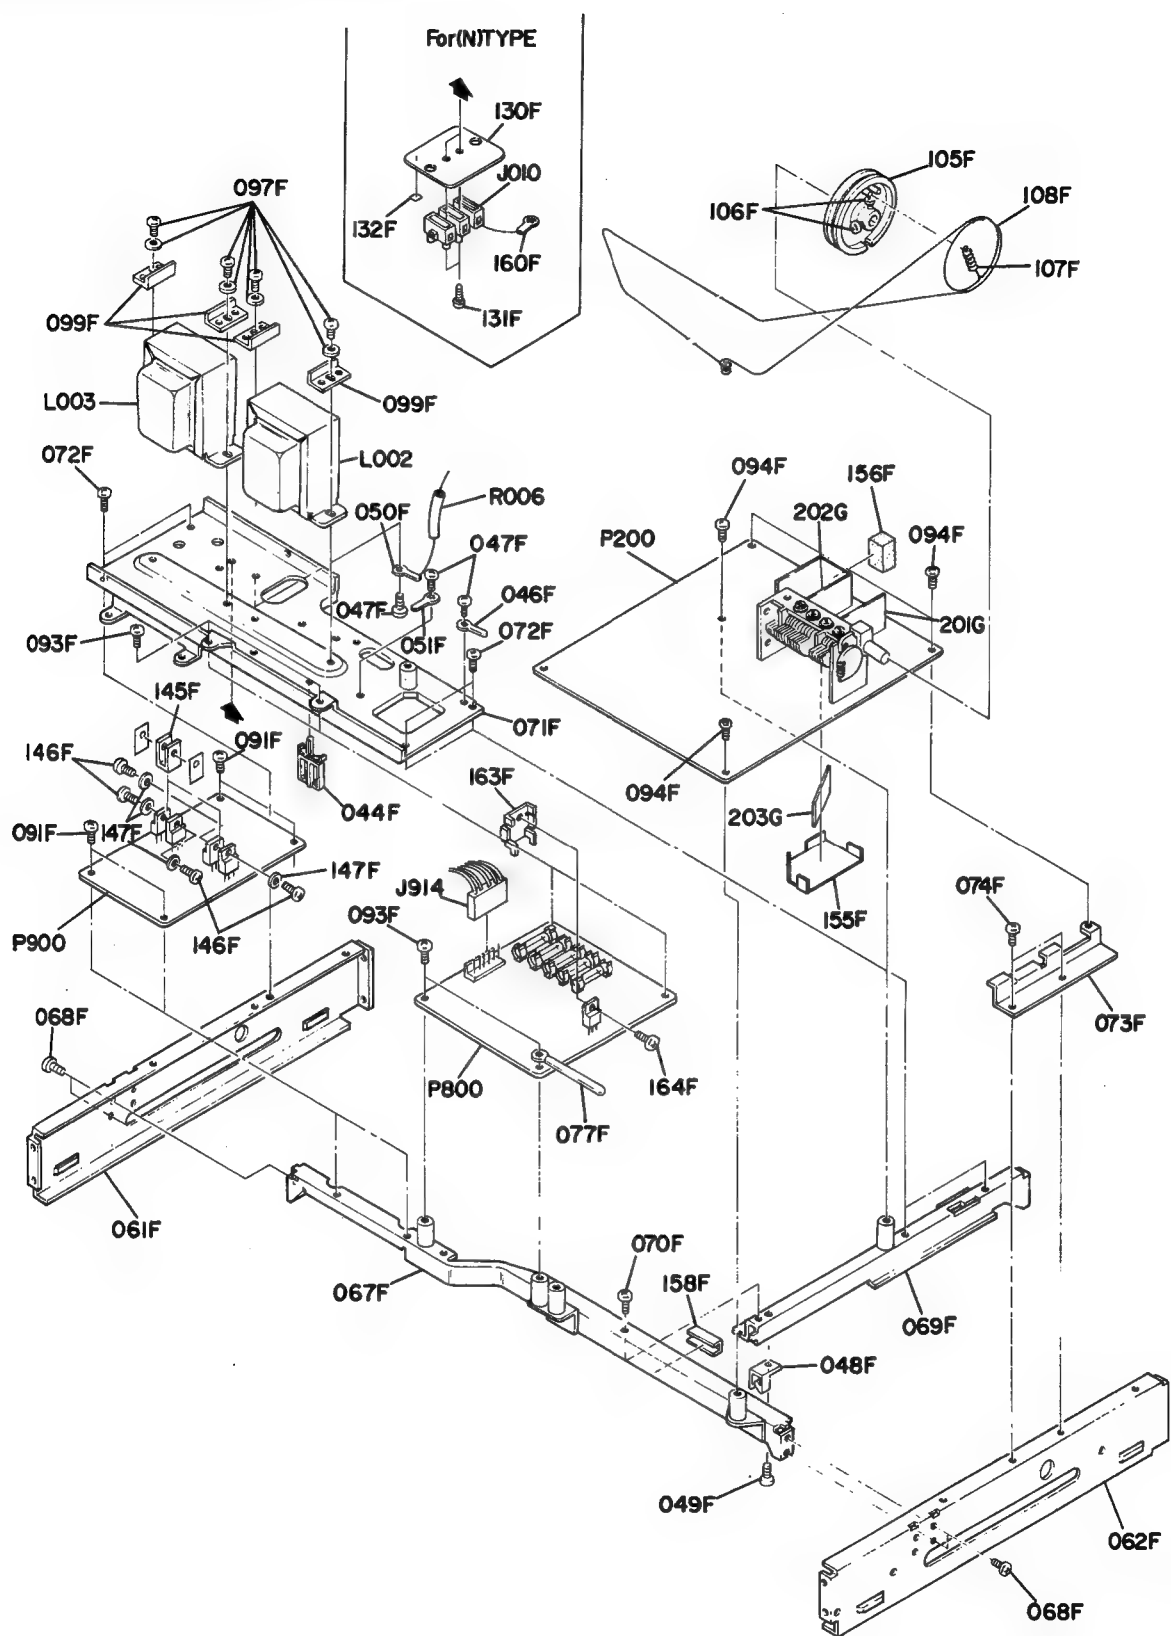


- (U) for U.S.
- (C) for Can.
- (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
B	1	1	1	2258159400	Drum Assembly
105F	1	1	1	2219159010	Drum
106F	2	2	2	51064019A9	P.H.M. Screw
107F	1	1	1	71101689L0	Spring
044F	1	1	1	2886005040	Clamper
046F	1	1	1	62030049W0	Lug
047F	3	3	3	51280306B0	B.H. Tapped Screw B3 x 6
048F	1	1	1	2887005012	Clamper
049F	1	1	1	51280306B0	B.H. Tapped Screw B3 x 6
050F	1	1	1	62030049W0	Lug
051F	1	1	1	62030049W0	Lug
061F	1	1	1	2216105023	Chassis (L)
062F	1	1	1	2216105033	Chassis (R)
067F	1	1	1	2285126012	Stay, Front
068F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
069F	1	1	1	2285126030	Stay, Main
070F	1	1	1	51280306B0	B.H. Tapped Screw B3 x 6
071F	1	1	1	2285105012	Chassis, Main
072F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
073F	1	1	1	2285126020	Stay, Side
074F	2	2	2	51280306B0	B.H. Tapped Screw B3 x 6
077F	1	1	1	2871005010	Clamper
091F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
093F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
094F	4	4	4	51280306B0	B.H. Tapped Screw B3 x 6
097F	4	4	4	51470408A9	L. Washer Screw L4 x 8
099F	4	4	4	2896104010	Retainer
108F	1	1	1	72071605A0	String (150)
130F			1	3953120030	Insulator
131F			2	51280314B0	B.H. Tapped Screw B3 x 14
132F			1	2882861020	Label
145F	2	2	2	2219267040	Heatsink
146F	4	4	4	50020305B9	Screw 3 x 5
147F	4	4	4	54040302A0	Spring Washer
155F	1	1	1	2285109050	Shield
156F	1	1	1	3918104010	Retainer
158F	1	1	1	4640259010	Bushing
160F			1	62030049W0	Lug
163F	1	1	1	2963267020	Heatsink
164F	1	1	1	51280306B0	B.H. Tapped Screw B3 x 6

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
201G	1	1	1	2259109040	Shield
202G	1	1	1	2259109053	Shield
203G	1	1	1	2259109062	Shield
J010			1	YL09030010	Terminal
J914	1	1	1	YJ06001310	Jack (6P)
L002	1	1		TS15713010	Power Transformer
L002			1	TS15713020	Power Transformer
L003	1	1		TS15713040	Power Transformer
L003			1	TS15713050	Power Transformer
R006	1	1		RC10225120	Resistor 2.2MΩ ±10% ½W
P200	1	1	1	YG22850010	P.W. Board, Tuner MPX
	1	1		ZZ22850110	P.W. Board Assembly
			1	ZZ22858110	P.W. Board Assembly
P800	1	1		YF22850010	P.W. Board, Power Supply
	1	1		ZZ22850010	P.W. Board Assembly
P800			1	YF22850020	P.W. Board, Power Supply
			1	ZZ22858020	P.W. Board Assembly
P900	1	1	1	YK22190310	P.W. Board, Scope Amp.
	1	1	1	ZZ22860310	P.W. Board Assembly

8.7 [H01-99] PACKING MATERIALS

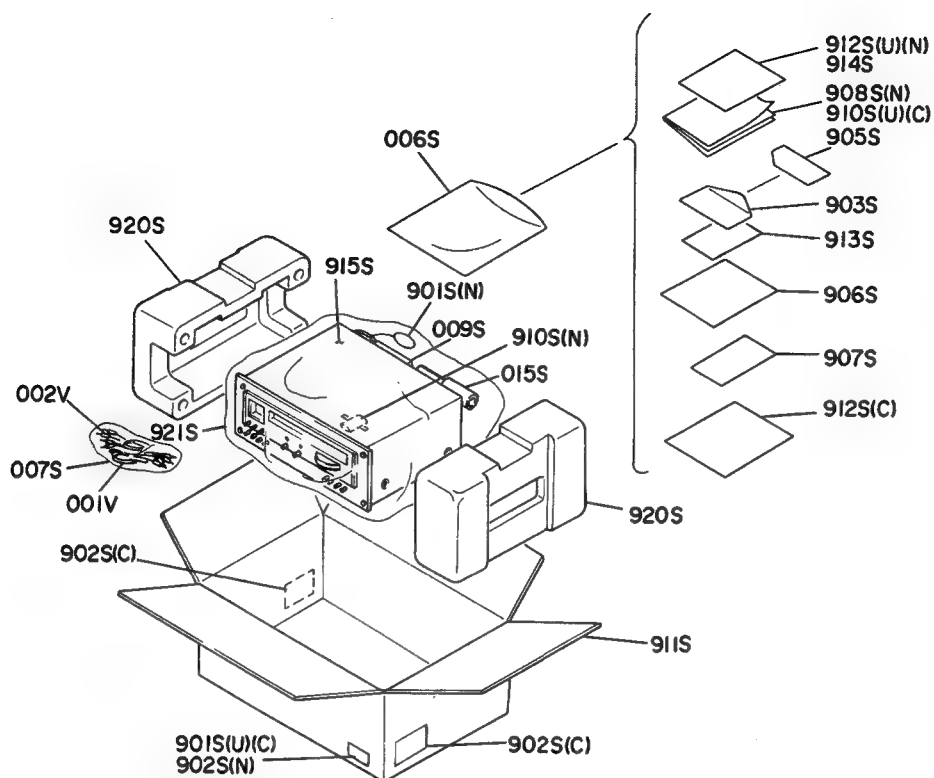

- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
006S	1	1	1	9013025010	Polyethy Bag
007S	1	1	1	9011325010	Polyethy Bag
009S	1	1	1	2864804010	Sleeve
015S	1	1	1	2819056010	Buffer
901S	2			9526019010	Serial No Card
901S		2		9526019020	Serial No Card
901S			1	9560000043	Hang Tag
902S		1		9510901020	Label
902S			2	9526019060	Serial No Card
903S		1		2918813012	Envelope
903S			1	2818813010	Envelope
905S		1	1	9630000180	Guarantee Card
906S		1		9650000053	S. Station Card
907S	1			2818854024	Guarantee Card
907S		1		2818854042	Guarantee Card
908S			1	2285851310	Instructions
910S	1			2285851010	Instructions

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
910S		1		2285851310	Instructions
910S			1	2731821010	Silicagel
911S	1			2285801010	Packing Case
911S		1		2285801150	Packing Case
911S			1	2285801020	Packing Case
912S	1			2285851020	Instructions
912S		1		2885851100	Instructions
912S			1	2885851030	Instructions
913S	1			2225813010	Envelope
914S		1		2285851050	Instructions
915S	1	1	1	2918107170	Sheet
920S	2	2	2	2965809012	Cushion
921S	1	1	1	9014335330	Polyethy Bag
001V	1	1	1	ZA02000070	EXT. Antenna, FM
002V	1	1	1	ZD01500160	Connective Cord

8.8 ELECTRICAL PARTS LIST

- (U): for U.S.A.
- (C): for Canada
- (N): for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
P200	1	1	1	YG22850010	P200-TUNER MPX
	1	1		ZZ22850110	CIRCUIT BOARD
			1	ZZ22858110	P.W. Board, Tuner MPX
					P.W. Board Assembly
					P.W. Board Assembly
C101	1	1	1	DD15200300	P200-CAPACITORS
C102	1	1	1	DK18103320	Ceramic 20pF ±5%
C103	1	1	1	DK18103320	Ceramic 0.01μF +80% -20%
C104	1	1	1	DK18223320	Ceramic 0.01μF +80% -20%
C105	1	1	1	DD15150300	Ceramic 0.022μF +80% -20%
C106	1	1	1	DD10050300	Ceramic 15pF ±5%
C107	1	1	1	DD10050370	Ceramic 5pF ±0.25pF
C108	1	1	1	DD15301360	Ceramic 5pF ±0.25pF
C109	1	1	1	DK18223320	Ceramic 300pF ±5%
C110	1	1	1	DD10020300	Ceramic 0.022pF +80% -20%
					Ceramic 2pF ±0.25pF
C111	1	1	1	DD15200350	Ceramic 20pF ±5%
C112	1	1	1	DD11100300	Ceramic 10pF ±0.5pF
C113	1	1	1	DD15150300	Ceramic 15pF ±5%
C114	1	1	1	DD15150300	Ceramic 15pF ±5%
C115	1	1	1	DK18223320	Ceramic 0.022μF +80% -20%
C116	1	1	1	EA10701690	Elect 100μF 16V
C118	1	1	1	EV33403560	Elect 0.33μF 35V
C119	1	1	1	DK18223320	Ceramic 0.022μF
C120	1	1	1	CA32400090	Variable C752J
C121	1	1	1	CT11000080	Trimming 10pF ±0.5pF
C122	1	1	1	DK18403320	Ceramic 0.04μF +100% -0
C123	1	1	1	DD10030370	Ceramic 3pF ±0.25pF
C151	1	1	1	DK18223320	Ceramic 0.022μF +80% -20%
C152	1	1	1	EA10601690	Elect 10μF 16V
C153	1	1	1	DF17102300	Film 0.001μF ±20%
C154	1	1	1	EA47503590	Elect 4.7μF 35V
C155	1	1	1	DF17103300	Film 0.01μF ±20%
C156	1	1	1	DF17563300	Film 0.056μF ±20%
C157	1	1	1	DF17103300	Film 0.01μF ±20%
C158	1	1	1	DK17103300	Ceramic 0.01μF ±20%
C159	1	1	1	DK17103300	Ceramic 0.01μF ±20%
C160	1	1	1	DD15150370	Ceramic 15pF ±5%
C161	1	1	1	DK17103300	Ceramic 0.01μF ±20%
C162	1	1	1	DF65391010	Film 390pF ±5%
C163	1	1	1	DK18223320	Ceramic 0.022μF +80% -20%
C164	1	1	1	EA47601690	Elect 47μF 16V
C165	1	1	1	DF17102300	Film 0.001μF ±20%
C166	1	1	1	DK17103300	Ceramic 0.01μF ±20%
C167	1	1	1	DF17222300	Film 2200pF ±20%
C201	1	1	1	DK18223320	Ceramic 0.022μF +80% -20%
C202	1	1	1	DK18103320	Ceramic 0.01μF +80% -20%
C203	1	1	1	DK18223320	Ceramic 0.022μF +80% -20%
C204	1	1	1	EA47405090	Elect 0.47μF 50V
C206	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C207	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C208	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C209	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C210	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C211	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C212	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
C213	1	1	1	DK18403320	Ceramic 0.04μF +80% -20%
C214	1	1	1	EA10601690	Elect 10μF 16V
C215	1	1	1	EA47405090	Elect 0.47μF 50V
C216	1	1	1	DD15101370	Ceramic 100pF ±5%
C217	1	1	1	EA10601690	Elect 10μF 16V
C218	1	1	1	EA47503590	Elect 4.7μF 35V
C219	1	1	1	EA10601690	Elect 10μF 16V
C220	1	1	1	DK18403320	Ceramic 0.04μF +100% -0
C221	1	1	1	EA10701690	Elect 100μF 16V
C222	1	1	1	EA10505090	Elect 1μF 50V
C223	1	1	1	DK18403320	Ceramic 0.04μF +100% -0
C224	1	1	1	DK18403320	Ceramic 0.04μF +100% -0
C225	1	1	1	EA10505090	Elect 1μF 50V
C301	1	1	1	DF55102090	Film 0.001μF ±5%
C302	1	1	1	DF16222300	Film 2200pF ±10%
C303	1	1	1	EA33502590	Elect 3.3μF 25V
C204	1	1	1	EQ47405010	Elect 0.47μF 50V
C305	1	1	1	EA33502590	Elect 3.2μF 25V
C306	1	1	1	EV33403560	Elect 0.33μF 35V
C307	1	1	1	DF17473010	Film 0.047μF ±20%
C308	1	1	1	DF15103300	Film 0.01μF ±5%
C309	1	1	1	EV33403560	Elect 0.33μF 35V
C311	1	1	1	EA10601690	Elect 10μF 16V
C312	1	1	1	EA10601690	Elect 10μF 16V
C313	1	1	1	EA10701690	Elect 100μF 16V
C314	1	1	1	EA22505090	Elect 2.2μF 50V
C315	1	1	1	EA22505090	Elect 2.2μF 50V
C316	1	1		DF15102300	Film 1000pF ±5%
C316			1	DF15222300	Film 0.002μF ±5%
C317	1	1		DF15102300	Film 1000pF ±5%
C317			1	DF15222300	Film 0.002μF ±5%
C318	1	1	1	EA47503590	Elect 4.7μF 35V
C319	1	1	1	EA47503590	Elect 4.7μF 35V
C320	1	1	1	EV33403560	Elect 0.33μF 35V
C321	1	1	1	EV33403560	Elect 0.33μF 35V
C322	1	1	1	EA10601690	Elect 10μF 16V
C323	1	1	1	EA10601690	Elect 10μF 16V
C324	1	1	1	DF15152300	Film 1500pF ±5%
C326	1	1	1	EA47503590	Elect 4.7μF 35V
C327	1	1	1	EA22701690	Elect 220μF 16V

- (U): for U.S.A.
- (C): for Canada
- (N): for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION	
	U	C	N			
					P200-RESISTORS (All Resistors are $\pm 5\%$ and $\frac{1}{4}W$)	
R101	1	1	1	GD05105140	1M Ω	
R102	1	1	1	GD05101140	100 Ω	
R103	1	1	1	GD05101140	100 Ω	
R104	1	1	1	GD05101140	100 Ω	
R105	1	1	1	GD05223140	22K Ω	
R106	1	1	1	GD05472140	4.7K Ω	
R107	1	1	1	GD05102140	1K Ω	
R108	1	1	1	GD05273140	27K Ω	
R109	1	1	1	GD05103140	10K Ω	
R110	1	1	1	GD05222140	2.2K Ω	
R111	1	1	1	GD05103140	10K Ω	
R112	1	1	1	GD05101140	100 Ω	
R113	1	1	1	GD05104140	100K Ω	
R114	1	1	1	GD05221140	220 Ω	
R151	1	1	1	RA01030260	Trimming	10K Ω (B)
R152	1	1	1	GD05102140	1K Ω	
R153	1	1	1	GD05103140	10K Ω	
R154	1	1	1	GD05103140	10K Ω	
R155	1	1	1	GD05102140	1K Ω	
R156	1	1	1	GD05223140	22K Ω	
R157	1	1	1	GD05301140	300 Ω	
R158	1	1	1	GD05151140	150 Ω	
R159	1	1	1	GD05152140	1.5K Ω	
R161	1	1	1	GD05201140	200 Ω	
R162	1	1	1	GD05473140	47K Ω	
R202	1	1	1	GD05331140	330 Ω	
R203	1	1	1	GD05272140	2.7K Ω	
R204	1	1	1	GD05153140	15K Ω	
R205	1	1	1	GD05621140	620 Ω	
R206	1	1	1	GD05331140	330 Ω	
R208	1	1	1	GD05222140	2.2K Ω	
R209	1	1	1	RA05030090	Trimming	50K Ω (B)
R210	1	1	1	GD05333140	33K Ω	
R211	1	1	1	GD05103140	10K Ω	
R212	1	1	1	RA05020160	Trimming	5K Ω
R214	1	1	1	GD05183140	18K Ω	
R215	1	1	1	GD05331140	330 Ω	
R216	1	1	1	RA05030090	Trimming	50K Ω (B)
R217	1	1	1	GD05471140	470 Ω	
R218	1	1	1	GD05133140	13K Ω	
R219	1	1	1	GD05202140	2K Ω	
R220	1	1	1	GD05184140	180K Ω	
R221	1	1	1	GD05104140	100K Ω	
R222	1	1	1	GD05152140	1.5K Ω	
R223	1	1	1	GD05272140	2.7K Ω	
R224	1	1	1	GD05182140	1.8K Ω	
R225	1	1	1	GD05105140	1M Ω	
R226	1	1	1	GD05334140	330K Ω	
R227	1	1	1	RA01050090	Trimming	1M Ω (B)
R229	1	1	1	GD05105140	1M Ω	

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
R230	1	1	1	GD05334140	330K Ω
R231	1	1	1	GD05224140	220K Ω
R232	1	1	1	GD05473140	47K Ω
R233	1	1	1	GD05563140	56K Ω
R234	1	1	1	GD05222140	2.2K Ω
R235	1	1	1	GD05333140	33K Ω
R236	1	1	1	GD05223140	22K Ω
R301	1	1	1	GD05224140	220K Ω
R302	1	1	1	GD05272140	2.7K Ω
R303	1	1	1	GD05562140	5.6K Ω
R304	1	1	1	RA04720050	Trimming 4.7K Ω (B)
R305	1	1	1	GD05333140	33K Ω
R306	1	1	1	GD05224140	220K Ω
R307	1	1	1	RA01040110	Trimming 100K Ω (B)
R308	1	1	1	GD05333140	33K Ω
R309	1	1	1	GD05102140	1K Ω
R311	1	1	1	GD05472140	4.7K Ω
R312	1	1	1	GD05472140	4.7K Ω
R313	1	1	1	GD05472140	4.7K Ω
R314	1	1	1	GD05273140	27K Ω
R315	1	1	1	GD05472140	4.7K Ω
R316	1	1	1	GD05472140	4.7K Ω
R317	1	1	1	GD05273140	27K Ω
R318	1	1	1	GD05105140	1M Ω
R319	1	1	1	GD05105140	1M Ω
R320	1	1	1	GD05184140	180K Ω
R322	1	1	1	GD05391140	390 Ω
R323	1	1	1	GD05391140	390 Ω
R324	1	1	1	GD05683140	68K Ω
R325	1	1	1	GD05683140	68K Ω
R326	1	1	1	GD05753140	75K Ω
R327	1	1	1	GD05753140	75K Ω
R328	1	1	1	GD05473140	47K Ω
R329	1	1	1	GD05473140	47K Ω
R330	1	1	1	GD05222140	2.2K Ω
R331	1	1	1	GD05222140	2.2K Ω
R332	1	1	1	GD05473140	47K Ω
R333	1	1	1	GD05473140	47K Ω
R334	1	1	1	GD05102140	1K Ω
R335	1	1	1	GD05102140	1K Ω
R336	1	1	1	RA02030060	Trimming 20K Ω (B)
R337	1	1	1	GD05153140	15K Ω
R338	1	1	1	GG05220140	22 Ω
R339	1	1	1	GD05102140	1K Ω
R340	1	1	1	GD05472140	4.7K Ω
R341	1	1	1	GD05474140	470K Ω
R342	1	1	1	GD05471140	470 Ω
R343	1	1	1	GD05304140	300K Ω
R344	1	1	1	GD05223140	22K Ω
R345	1	1	1	GD05331140	330 Ω

- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
P200-SEMICONDUCTORS					
Q101	1	1	1	HF400451B0	F.E.T. 3SK45B
Q102	1	1	1	HT310471C0	Transistor 2SC1047 (C)
Q103	1	1	1	HT308291C0	Transistor 2SC829 (C)
Q151	1	1	1	HC10019010	IC HA1197
Q152	1	1	1	HV00006120	Varistor MV-203
Q201	1	1	1	HT308291C0	Transistor 2SC829 (C)
Q202	1	1	1	HC10033010	IC HA11225
Q203	1	1	1	HT309452A0	Transistor 2SC945 (P or Q)
Q204	1	1	1	HD20011050	Diode 1S1555
Q205	1	1	1	HD20011050	Diode 1S1555
Q206	1	1	1	HC10019060	IC μ PC741C
Q207	1	1	1	HV00006120	Varistor MV-203
Q208	1	1	1	HD20011050	Diode 1S1555
Q301	1	1	1	HT309452A0	Transistor 2SC945 (P or Q)
Q302	1	1	1	HC10029010	IC HA11223
Q303	1	1	1	HT317400S0	Transistor 2SC1740LN (S)
Q304	1	1	1	HT317400S0	Transistor 2SC1740LN (S)
Q305	1	1	1	HT309452A0	Transistor 2SC945 (P or Q)
Q306	1	1	1	HT309452A0	Transistor 2SC945 (P or Q)
Q307	1	1	1	HT317400S0	Transistor 2SC1740LN (S)
Q308	1	1	1	HT317400S0	Transistor 2SC1740LN (S)
Q309	1	1	1	HD30033090	Zener WZ052
P200-FILTERS					
F151	1	1	1	FF10045190	Ceramic 455kHz
F201	1	1	1	FF11070050	Ceramic 10.7MD1
F202	1	1	1	FF11070050	Ceramic 10.7MD1
F203	1	1	1	FF11070050	Ceramic 10.7MD1
P200-COILS					
L101	1	1	1	LA12026170	Ant Coil FM
L102	1	1	1	LA12026180	Ant Coil FM
L103	1	1	1	LC17510010	Choke Coil 0.75 μ F
L104	1	1	1	LI10016010	I.F.T. FM
L105	1	1	1	LO12046010	OSC Coil FM
L106	1	1	1	LC13320020	Choke Coil 3.3 μ H
L151	1	1	1	LI10015060	I.F.T. AM
L152	1	1	1	LI10010720	I.F.T. AM
L153	1	1	1	LO10010480	OSC Coil AM
L155	1	1	1	LC13320020	Choke Coil 3.3 μ H
L201	1	1	1	LI10156210	I.F.T. FM
L202	1	1	1	LI10156220	I.F.T. FM
L203	1	1	1	LC11830010	Choke Coil 18 μ H
L204	1	1	1	LC13320020	Choke Coil 3.3 μ H
L301	1	1	1	LS20010010	M.P.X. Coil
L302	1	1	1	LS20010010	M.P.X. Coil

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
P800	1	1		YF22850010	P800-POWER SUPPLY CIRCUIT BOARD
	1	1		ZZ22850010	P.W. Board, Power Supply
P800			1	YF22850020	P.W. Board Assembly
			1	ZZ22858020	P.W. Board, Power Supply
					P.W. Board Assembly
C802	1	1	1	EA47701690	P800-CAPACITORS
C803	1	1	1	EA47702590	Elect 470μF 16V
C804	1	1	1	DK18103510	Elect 470μF 25V
C805	1	1	1	DK18103510	Ceramic 0.01μF
C806	1	1	1	EA47702590	Ceramic 0.01μF
C807	1	1	1	EA22802590	Elect 470μF 25V
C808	1	1	1	EA47702590	Elect 470μF 25V
C809	1	1	1	EA10625010	Elect 2200μF 25V
C810	1	1	1	EA10625010	Elect 470μF 25V
C811	1	1	1	EA10635010	Elect 10μF 250V
					Elect 10μF 250V
					Elect 10μF 350V
C812	1	1	1	EA10635010	Elect 10μF 350V
C813	1	1	1	EA10702590	Elect 100μF 25V
C814	1	1	1	EA33601690	Elect 33μF 16V
C815	1	1	1	EQ10505010	Elect 1μF 50V
C816	1	1	1	EA47503590	Elect 4.7μF 35V
					P800-RESISTORS
					(All Resistors are ±5% and ¼W)
R801	1	1	1	GD05562140	5.6KΩ
R802	1	1	1	GD05104140	100KΩ
R803	1	1	1	GD05103140	10KΩ
R805	1	1	1	GG05331140	330Ω
R806	1	1	1	GG05221140	220Ω
R807	1	1	1	GW10822030	8.2KΩ ±10% 3W
R808	1	1	1	GG05301120	300Ω ¼W
R809	1	1	1	GG05472140	4.7KΩ
R810	1	1	1	GD05103140	10KΩ
R811	1	1	1	GD05154140	150KΩ
R812	1	1	1	GD05123140	12KΩ
R813	1	1	1	GD05105140	1MΩ
R814	1	1	1	GD05100140	10Ω
R815	1	1	1	GD05153140	15KΩ
R816	1	1	1	GD05471140	470Ω
R817	1	1	1	GD05104140	100KΩ
R818	1	1	1	GA05330010	33Ω 1W
R819	1	1	1	GA05301010	300Ω 1W
R820	1	1	1	GD05473140	47KΩ
R821			1	RF05100140	Fusible 10Ω

- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	Q'TY			PART NO.	DESCRIPTION
	U	C	N		
P800-SEMICONDUCTORS					
Q801	1	1	1	HT309452A0	Transistor 2SC945 (Q or R)
Q802	1	1	1	HT309452A0	Transistor 2SC945 (Q or R)
Q803	1	1	1	HT403132A0	Transistor 2SD313 (D or E)
Q804	1	1	1	HD30027090	Zener WZ140
Q805	1	1	1	HD20005010	Diode W06B
Q806	1	1	1	HD20005010	Diode W06B
Q807	1	1	1	HD20014030	Diode DS130YA
Q808	1	1	1	HD20014030	Diode DS130YA
Q809	1	1	1	HD20021100	Diode 2DL15
Q810	1	1	1	HD30027090	Zener WZ140
Q811	1	1	1	HD20011050	Diode 1S1555
Q812	1	1	1	HD20011050	Diode 1S1555
Q813	1	1	1	HT309452A0	Transistor 2SC945 (Q or R)
Q814	1	1	1	HT309452A0	Transistor 2SC945 (Q or R)
Q815	1	1	1	HD20011050	Diode 1S1555
P800-MISCELLANEOUS					
F801	1	1		FS10300060	Fuse 3A
F802	1	1		FS10010080	Fuse 0.1A
F803	1	1		FS10010080	Fuse 0.1A
F804	1	1		FS10010080	Fuse 0.1A
F805	1	1		FS10030020	Fuse 0.3A
F801			1	FS10125800	Fuse 1.25AT
F802			1	FS30500010	Fuse 50mAT
F803			1	FS30500010	Fuse 50mAT
F804			1	FS30500010	Fuse 50mAT
F805			1	FS10031800	Fuse 315mA
J801					
J810	10	10		YJ08000170	Jack, Fuse Holder
J801					
J810			10	YJ08000270	Jack, Fuse Holder
J821	1	1	1	YP06001310	Plug (6P)
P900-SCOPE AMP. CIRCUIT BOARD					
P900	1	1	1	YK22190310	P.W. Board, Scope Amp.
	1	1	1	ZZ22860310	P.W. Board Assembly
P900-CAPACITORS					
C901	1	1	1	DK18103820	Ceramic 0.01μF 1KV
C902	1	1	1	DK18103820	Ceramic 0.01μF 1KV
C903	1	1	1	DF17473520	Film 0.047μF ±20% 200V
P900-RESISTORS					
(All Resistors are ±5% and ¼W)					
R901	1	1	1	RT05224140	220KΩ
R902	1	1	1	RT05224140	220KΩ
R903	1	1	1	RT05224140	220KΩ
R904	1	1	1	RT05224140	220KΩ
R905	1	1	1	RT05682140	6.8KΩ
R906	1	1	1	RT05682140	6.8KΩ
R907	1	1	1	RT05222140	2.2KΩ
R908	1	1	1	RT05222140	2.2KΩ
R909	1	1	1	RT05103140	10KΩ
R910	1	1	1	RT05103140	10KΩ

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
R911	1	1	1	RT05103140	10K Ω
R912	1	1	1	RT05103140	10K Ω
R913	1	1	1	RT05683140	68K Ω
R914	1	1	1	RT05683140	68K Ω
R915	1	1	1	RT05623140	62K Ω
R916	1	1	1	RT05623140	62K Ω
R917	1	1	1	RT05823140	82K Ω
R918	1	1	1	RT05204140	200K Ω
R919	1	1	1	RT05105140	1M Ω
R920	1	1	1	RT05105140	1M Ω
R921	1	1	1	RT05224140	220K Ω
R922	1	1	1	RT05155140	1.5M Ω
R923	1	1	1	RT05153140	15K Ω
R924	1	1	1	RT05473140	47K Ω
R925	1	1	1	RA01030250	Trimming, 10K Ω
R926	1	1	1	RA01030250	Trimming, 10K Ω
R927	1	1	1	RA01020150	Trimming, 1K Ω
R928	1	1	1	RA01020150	Trimming, 1K Ω
R929	1	1	1	RT05204140	200K Ω
R930	1	1	1	RT05152140	1.5K Ω
R931	1	1	1	RA01030070	Trimming, 10K Ω
R932	1	1	1	RT05473140	47K Ω
P900-SEMICONDUCTORS					
Q901	1	1	1	HF200304A0	F.E.T. 2SK30A
Q902	1	1	1	HF200304A0	F.E.T. 2SK30A
Q903	1	1	1	HF200304A0	F.E.T. 2SK30A
Q904	1	1	1	HF200304A0	F.E.T. 2SK30A
Q905	1	1	1	HT317562B0	Transistor 2SC1756
Q906	1	1	1	HT317562B0	Transistor 2SC1756
Q907	1	1	1	HT317562B0	Transistor 2SC1756
Q908	1	1	1	HT317562B0	Transistor 2SC1756
Q909	1	1	1	HD20003210	Diode 1S2471
Q910	1	1	1	HD20003210	Diode 1S2471
Q911	1	1	1	HD20001210	Diode 1S2473
P900-MISCELLANEOUS					
J901	1	1	1	YP06001630	Plug (8P)
J902	1	1	1	YP06001050	Plug (5P)
J903	1	1	1	YP06001050	Plug (5P)
J904	1	1	1	YB00140030	Connective Cord
J905	1	1	1	YB00180010	Connective Cord
J906	1	1	1	YB00140030	Connective Cord
J907	1	1	1	YB00120010	Connective Cord
J908	1	1	1	YB00140040	Connective Cord
J909	1	1	1	YB00150010	Connective Cord
J910	1	1	1	YB00180020	Connective Cord
J911	1	1	1	YB00200290	Connective Cord
J912	1	1	1	YB00180030	Connective Cord
J913	1	1	1	YB00210010	Connective Cord
J914	1	1	1	YJ06001310	Jack (6P)

- (U) for U.S.A.
- (C) for Canada
- (N) for Europe

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
PR00	1	1	1	YK22861220	PR00-SCOPE SWITCH CIRCUIT BOARD
	1	1	1	ZZ22852210	P.W. Board, Scope Switch P.W. Board Assembly
CR01	1	1	1	DF17473050	PR00-CAPACITORS
CR02	1	1	1	EV22403560	Film 0.047 μ F \pm 20%
CR03	1	1	1	EV22403560	Elect 0.22 μ F 35V
CR04	1	1	1	EV22403560	Elect 0.22 μ F 35V
CR05	1	1	1	DK18223320	Ceramic 0.022 μ F +100% -0
RR01	1	1	1	GG05221140	PR00-RESISTORS (All Resistors are \pm 5% and $\frac{1}{2}$ W)
RR02	1	1	1	GA05181010	220 Ω
RR03	1	1	1	GD05473140	180 Ω 1W
RR04	1	1	1	GD05473140	47K Ω
RR05	1	1	1	GD05394140	47K Ω
RR06	1	1	1	GD05183140	390K Ω
RR07	1	1	1	GD05473140	18K Ω
RR08	1	1	1	GD05273140	47K Ω
RR09	1	1	1	GD05473140	27K Ω
RR10	1	1	1	GD05183140	47K Ω
RR11	1	1	1	GD05103140	18K Ω
RR13	1	1	1	GD05473140	10K Ω
JR01	1	1	1	YJ06001330	47K Ω
SR01	1	1	1	SP04040202	PR00-MISCELLANEOUS Jack, (8P)
PS00	1	1	1	YH22851210	Push Switch, Scope
SS01	1	1	1	SP06020100	PS00-FUNCTION SWITCH CIRCUIT BOARD
PT00	1	1	1	YH22851220	P.W. Board, Function Switch
CT01	1	1	1	ZZ22851210	P.W. Board Assembly
CT02	1	1	1	ZZ22858220	P.W. Board Assembly
QT01	1	1	1	HD20011050	PT00-MODE SWITCH CIRCUIT BOARD
ST00	1	1	1	SP02030092	P.W. Board, Mode Switch
ST00	1	1	1	SP02020433	P.W. Board Assembly
					PT00-CAPACITORS
					Film 0.0022 μ F \pm 5%
					Film 0.0022 μ F \pm 5%
					PT00-SEMICONDUCTOR
					Diode 1S1555
					PT00-SWITCH
					Push Switch, Mode
					Push Switch, Mode

REF. DESIG.	QTY			PART NO.	DESCRIPTION
	U	C	N		
PY00	1	1	1	YK22861220	PY00-LED CIRCUIT BOARD
	1	1	1	ZZ22861220	P.W. Board, LED P.W. Board Assembly
RY01	1	1	1	GD05122140	PY00-RESISTORS
RY03	1	1	1	GD05122140	1.2K Ω \pm 5% $\frac{1}{2}$ W
QY01	1	1	1	HI10004030	1.2K Ω \pm 5% $\frac{1}{2}$ W
QY03	1	1	1	HI10004030	PY00-SEMICONDUCTORS
					L.E.D
					L.E.D
PZ01	1	1	1	YF22860020	PZ01-DIAL ILLUMINATOR CIRCUIT BOARD
JZ03	1	1	1	ZZ22860020	P.W. Board, Dial Illuminator
JZ14	1	1	1	ZZ22860020	P.W. Board Assembly
VZ01	12	12	12	YJ08000170	Jack, Lamp Holder
VZ06	6	6	6	IN10080070	Dial Lamp 0.2A 8V

(W01-99)	Assembly and Wiring
(T01-99)	Adjustment
(X01-00)	Correction

[FOR EUROPEAN MODEL ONLY]

FM TUNER SECTION

Frequency Range	87.5~108 MHz
Usable Sensitivity 40 kHz Deviation, 98 MHz	
Mono, S/N 26 dB	1.4 μ V
Stereo, S/N 46 dB	45 μ V
Alternate Channel Selectivity, 98 MHz \pm 300 kHz	75 dB
Image Response Rejection, 98 MHz	60 dB
IF Rejection, 98 MHz	98 dB
Spurious Response Rejection, 98 MHz	98 dB
AM Suppression, 98 MHz	59 dB
Signal-to-Noise Ratio, 98 MHz	
Unweighted: Mono	65 dB
Stereo	60 dB
Weighted: Mono	68 dB
Stereo	64 dB
Pilot Signal & Subcarrier Rejection	
19 kHz	68 dB
38 kHz	74 dB
Total Harmonic Distortion, 98 MHz	
Mono	0.06%
Stereo	0.17%
Frequency Response	
30 Hz~15 kHz	+0, -0.4 dB
Separation	
Stereo	55 dB
Channel Balance	0.3 dB
Output Voltage, 1 kHz	560 mV
Output Impedance, 1 kHz	1.0 kohms
Acceptable Load Impedance, 1 kHz	10 kohms
Antenna Terminals	
Balanced	300 ohms
Unbalanced	75 ohms

AM TUNER SECTION

Frequency Range	515~1650 kHz
Usable Sensitivity (26 dB S/N 30% Mod., 1 MHz)	25 μ V
Selectivity, 1 MHz \pm 9 kHz	46 dB
Image Rejection, 1 MHz	50 dB
IF Rejection, 1 MHz	40 dB
Spurious Response Rejection, 1 MHz	105 dB
Signal-to-Noise Ratio, 1 MHz	60 dB
Frequency Response, 1 MHz \pm 3 dB	40 Hz~2.6 kHz
Total Harmonic Distortion, 1 MHz	0.5%

GENERAL

Power Requirements	220 V AC, 50 Hz
(E and N versions are featuring an external voltage selector for use on 110/120/240 V. Other versions can be converted by a qualified technician to operate on 110/120/240 V.)	
Power Consumption	30 W
Semiconductor Complement	
Integrated Circuits	4
Transistors	20
Diodes	19
Field Effect Transistors	5
Dimensions	
Panel Width	416 mm (16-3/8")
Panel Height	146 mm (5-3/4")
Depth	301 mm (11-7/8")

9. TECHNICAL SPECIFICATIONS

[FOR U.S.A. & CANADIAN MODELS ONLY]

FM TUNER SECTION:

Sensitivity	
IHF Usable	10.3 dBf (1.8 μ V)
IHF 50 dB Quieting (Mono)	13.2 dBf (2.5 μ V)
(Stereo)	37.3 dBf (40 μ V)
Quieting Slope (Mono)	
RF Input for 30 dB Quieting	9.3 dBf (1.6 μ V)
Quieting at:	
20 dBf (5.5 μ V)	58 dB
25 dBf (10 μ V)	62 dB
40 dBf (55 μ V)	70 dB
65 dBf (1000 μ V)	74 dB
Quieting Slope (Stereo)	
Quieting at:	
30 dBf (17 μ V)	42 dB
40 dBf (55 μ V)	53 dB
50 dBf (173 μ V)	58 dB
65 dBf (1000 μ V)	65 dB
Distortion (Mono) at 65 dBf (1000 μ V)	
100 Hz	0.25%
1000 Hz	0.15%
6000 Hz	0.3%
Distortion (Stereo) at 65 dBf (1000 μ V)	
100 Hz	0.35%
1000 Hz	0.3%
6000 Hz	0.5%
Distortion (Mono and Stereo)	
at 50 dB Quieting, 100 Hz	0.6%
Hum and Noise	
at 65 dBf (1000 μ V)	
Mono	72 dB
Frequency Response	
30 Hz to 15 kHz	
Mono	+0.2 dB, -1.5 dB
Stereo	+0.2 dB, -1.5 dB
Capture Ratio	
at 45 dBf (100 μ V)	1.5 dB
at 65 dBf (1000 μ V)	1.0 dB
Alternate Channel Selectivity	70 dB
Spurious Response Rejection	90 dB
Image Response Rejection	60 dB
I.F. Rejection (Balanced)	80 dB
A.M. Suppression	50 dB
Stereo Separation	
100 Hz	40 dB
1000 Hz	45 dB
10 kHz	40 dB
Subcarrier Rejection	60 dB

AM TUNER SECTION:

IHF Usable Sensitivity	15 μ V
Distortion (THD), 30% Modulation	0.5%
Signal-to-Noise Ratio	50 dB
Alternate Channel Selectivity	46 dB
Image Rejection	45 dB
Spurious Response Rejection	60 dB
I.F. Rejection	40 dB

GENERAL:

Power Requirements	120 V AC, 60 Hz
Power Consumption	30 W

Dimensions:

Panel Width	416 mm (16-3/8 inches)
Panel Height	146 mm (5-3/4 inches)
Depth	301 mm (11-7/8 inches)

Weight:

Unit alone	8.5 kg (18.7 lbs)
Packed for shipment	10.5 kg (23.1 lbs)